



## Astra Cables

The Astra may communicate by RS-232 connection to a PC. It may also communicate to another Astra scale for the purpose of copying data from one machine to another.

The cable pin assignments are listed below for several types of cables. Black Box and Radio Shack part numbers are provided for each cable to facilitate purchasing a pre-fabricated cable.

<b><i>Astra to PC</i> and <i>Astra to Astra</i> Null Modem Cable</b>				<b>Black Box Part Number</b> <a href="http://www.blackbox.com">www.blackbox.com</a>	<b>Radio Shack Part Number</b> <a href="http://www.radioshack.com">www.radioshack.com</a>
<u>Astra</u>	<u>Cable</u>	<u>Cable</u>	<u>PC or Astra</u>		
9-pin Male	9-pin Female		9-pin Female	<b>EYN257H-0006-FF</b>	9-pin Female to 9-pin Female cable <b>26-152B</b>
	RXD 2	————— 3	TXD		
	TXD 3	————— 2	RXD		9-pin M/F Null Modem adapter <b>26-264B</b>
	SG 5	————— 5	SG		

### ***Astra to PC* Null Modem Cable**

<u>Astra</u>	<u>Cable</u>	<u>Cable</u>	<u>PC</u>	
9-pin Male	9-pin Female		25-pin Female	<b>EVNBPC-0006-FF</b>
	RXD 2	————— 2	TXD	
	TXD 3	————— 3	RXD	
	SG 5	————— 7	SG	