

480/482 Legend Series Configuration Menus

(Press Menu Key to enter, also available when Configuration switch is pressed)

AUDIT		TARE	UNITID	ACCUM	TIMDAT	SETPNT	SERIAL			ETHNET				USB		PFRMAT	VERS	MISC							
CALIB	CONFIG	Enter Tare	Enter ID	VIEW TIME DATE PRINT CLR Y	TIME DATE	BATCHG OFF AUTO MANUAL	SETPT1-8 USER VALUE ENABLE	SUPVSR KIND TRIP WAITSS PUSHPR PUSHAC PUSHTR DIGOUT BATSEQ PRACT HYSTER	COM-1 TRIGGER BAUD BITS SBITS TERMIN EOLDLY ECHO PRNMSG	COM-2 TRIGGER BAUD BITS SBITS TERMIN EOLDLY ECHO PRNMSG	STREAM NONE LOCAL REMOTE	DHCP ON OFF	IPADRS Enter Value	NETMSK Enter Value	DFTGWY Enter Value	MAC View Only	SERVER TRIGGER TIMOUT TERMIN SFMT PORT EOLDLY ECHO	CLIENT TRIGGER TIMOUT TERMIN SFMT RMPORT RMOTIP EOLDLY ECHO	DEVICE HOSTPC DRIVE PRINTR	TRIGGER DEMAND COMAND	GFMT NFMT ACCFMT SPFMT	FIRMW LR	POWER MANUAL AUTO	BKLGHT OFF ON AUTO	BAT BAT LEVEL

Shaded menus indicate lower level values, selections or settings are not shown.

(Press Configuration Switch to enter)

CONFIG	FORMAT	CALIBR	PROGRM	DIG IN	ALGOUT	PASWRD	USBMEM	TEST	MENU																
						CNFG Enter Value	USER Enter Value	SAVE LOAD	ADTEST Raw A/D Counts	NWGMNT TOTAL OVRCAP	WGMNST 999999	DIGIN 1-4 VIEW	DIGOUT 1-4 HI LOW	ALGOUT 0 25% 50% 100%	DEFLT Press G/N	See Menu Above									
						SOURCE GROSS NET	OFFSET 0% 20%	ERRACT FULLSC HOLD ZEROSC	MIN Enter Value	MAX Enter Value	MINNEG NO YES	MAXNEG NO YES	TWZERO Enter Value	TWSPAN Enter Value	OUTPUT CURENT VOLTAGE										
						DIGIN1-4										OFF ZERO TARE NT-GRS UNITS DPSTAR PRINT CLR CN KBDLOC HOLD CLRTAR ACCUM CLRACC BATSTR BATSTP BATRES BATPUS BATRUN NET GROSS PRI SEC									

PWRUPM	REGULA	CONSNU	CONSTU	ACCUM	RTZGRD	DATE	TIME	SLEEP	STDBY	WGTHRH	DDTHRH	
GO DELAY	NTEP OIML CANADA NONE	0- 999999	0- 999999	OFF ON	Enter Value	DATFMT MMDDYY DDMMYY YYMMDD YYDDMM	DATSEP SLASH DASH SEMI	TIMFMT 24 HOUR 12 HOUR	TIMSEP COLON COMMA	NEVER 1 MIN 2 MIN 5 MIN 10 MIN	1 SEC 2 SEC 3SEC 5 SEC 10 SEC 60 SEC OFF	0-FS 0- 999999

WZERO	WVAL	WSPAN	REZERO
CAL "ENTER" Press Enter	EDIT Enter Value	Enter Value	CAL "ENTER" Press Enter

PRIMAR			SECNDR		
DECPNT	DSPDIV	UNITS	DECPNT	DSPDIV	UNITS
888888	1d	LB	888888	1d	LB
8.88888	2d	KG	8.88888	2d	KG
88.8888	5d	OZ	88.8888	5d	OZ
888.888	10d	TN	888.888	10d	TN
8888.88	20d	T	8888.88	20d	T
88888.8	50d	G	88888.8	50d	G

GRADS	ZTRKBN	ZRANGE	INIZR	MOTBN	OVRLOA	DSPRAT	SMPRAT	DIGFIL	ADPFIL	ROLFIL	TAREFN	
Enter Value	Enter Value	Enter Value	Enter Value	Enter Value	FS-2% FS-1D FS-9D FS	0.10 SEC 0.25 SEC 0.50 SEC 0.75 SEC 1.00 SEC NONE	5 HZ 10 HZ 20 HZ 40 HZ	ADPFIL ROLFIL OFF	AFSENS LIGHT MEDIUM HEAVY	AFTHRH Enter Value	BOTH NOTARE PBTARE KEYED	
										RFSTG1-3 2 4 8 16 32 64 1	RFSENS 8OUT 16OUT 32OUT 64OUT 128OUT 2OUT 4OUT	RFTHRH NONE 2 dd 5 dd 10 dd 20 dd 50 dd 100 dd 200 dd 250 dd

Menu Navigation

Edit Numeric Values

000000

When editing numeric values, press ◀ or ▶ to change the digit selected. Press ▲ or ▼ to increment or decrement the value of the selected digit. Press ⏪ to save the value entered and return to the level above.

Level Layout

Level 1

Level 2

Level 3

Level 4

All levels are scrolled through using ◀ or ▶. Level four is shown as a vertical list for illustration purpose only.



230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • International 715-234-9171
www.ricelake.com

© Rice Lake Weighing Systems Content subject to change without notice.