

DFWPM SERIES

Portable repeater

USER MANUAL – v4

ENGLISH



INTRODUCTION

WARNINGS

General warnings	5
------------------	---

CHARACTERISTICS

Technical features	6
General functions	6
Powered by a rechargeable battery	6

HOW TO USE IT

PC power supply via a USB connector	7
Switching the system on	8
Switching the system off	9
How to identify the weighing scale displayed by the DFWPM (in multiple weighing scale systems)	9
How to repeat the single weighing scale or display the total weight	9
Calculating the tare in sum mode	9
The display	10
Features of the DFWPM keypad	10

DFWPM “USB” VERSION

Features of the keypad	11
------------------------	----

SPECIFIC FUNCTIONS FOR THE DFWPM “USB” VERSION

How to save a weighing operation	12
How to calculate the total weight of the weighing operations performed and save it	12

MANAGING THE LIST OF WEIGHING OPERATIONS WITH THE WEIGHCONSOLE SOFTWARE

Download the list of weighing operations on a PC	13
Saving the list of weighing operations	14
Deleting the list of weighing operations	14
End the communication between the DFWPM “USB” and the PC.	15

MESSAGES OF THE INSTRUMENT DURING USE

NOTES





INTRODUCTION

The purpose of this manual is to inform the use about the various operating modes, the features of the keys and the indications on the display of the “DFWPM” series portable wireless repeater.

Utmost attention was paid when drafting this manual; however, we appreciate anyone pointing out to us any unintentional errors or inaccuracies.

DFWPM is designed to:

- Repeat the weight and all the status icons of a single weighing scale at a time (up to 4 weighing scales can be connected).
- Remotely control one or more weighing scales, repeating the reset, tare, operating mode, print and switch-off functions;
- display the total weight of all connected weighing scales, for example when the object to be weighed is very bulky and needs more weighing points to be weighed as a whole.
- save each weighing operation carried out, both for internal use and for type-approved applications in relation to third parties;
- download the list of weighing operations on the PC.
(“USB” version only)

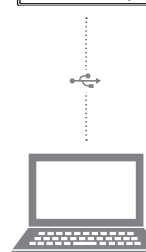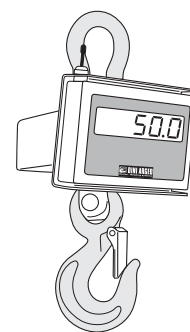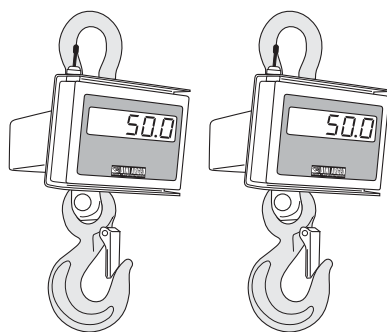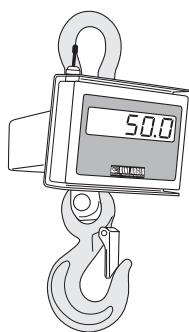

This publication, or any part of it, cannot be reproduced without the MANUFACTURER's written authorisation.

General warnings

The instrument is covered by a warranty and **MUST NOT BE OPENED BY THE USER** for any reason whatsoever. Any attempt to repair or modify the unit may expose the user to an electric shock hazard and will void any warranty condition. Any issue with the unit or the system must be reported to the manufacturer or the retailer from which it was purchased. In any case **POWER OFF THE APPLIANCE AND DISCONNECT THE POWER SUPPLY** before performing any operation. The instrument is insulated between the hazardous voltage area and the parts that can be accessed by the user.

- Do not pour liquids on the indicator.
- Do not use solvents to clean the indicator.
- Do not expose the instrument to direct sunlight or heat sources.

Anything not expressly described in this manual is to be regarded as unlawful use of the appliance.

Do not use in an environment where there is an explosion hazard.



The barred bin symbol on the product indicates that, at the end of its service life, the product must be handed over to suitable waste collection centres or returned to the retailer when purchasing a new equivalent product. Adequate separate waste collection to subsequently direct the product towards recycling processes helps avoid potential adverse effects on the environment and health and promotes the recycling of materials. Illegal product disposal by the user shall result in the application of the administrative fined envisaged by law.

Technical features

Power supply	rechargeable internal battery
Full charge time	8h (with original charger, supplied)
Operating time	about 40 hours
Operating temperature	-10...+40°C
Wireless communication type	radio frequency
Communication frequency	2,4 GHz*
Antenna	built-in
Display	25 mm backlit LCD display with adjustable intensity
Keypad	waterproof mechanical keypad with 5 buttons
Casing	ABS
Overall protection rating	IP65
USB version	
USB port	USB device 2.0
Connector	mini DIN (connection cable not included in the supply)

(*) Refer to the manual of the radio module for the choice of the radio channel (QSG_RF2G4).

General functions

All DFWPM versions are equipped with:

- subtractive tare across the whole range;
- programmable auto-off from 1 to 255 minutes or unplugged;
- flat battery warning via display symbols and 'LoB.bAt' message on the display.

Powered by a rechargeable battery

Indication of the internal battery charge level

 Battery charged

 Flat battery

The *LoB.bAt* message comes before the instrument automatically turns off.


Battery recharging indication



PC power supply via a USB connector

The DFWPM “USB” version can be used both as a mobile unit or as a fixed unit, permanently connected to the PC via a USB port.

The DFWPM “USB” can indeed be powered directly through the PC’s USB port and run as an RF/USB conversion module:

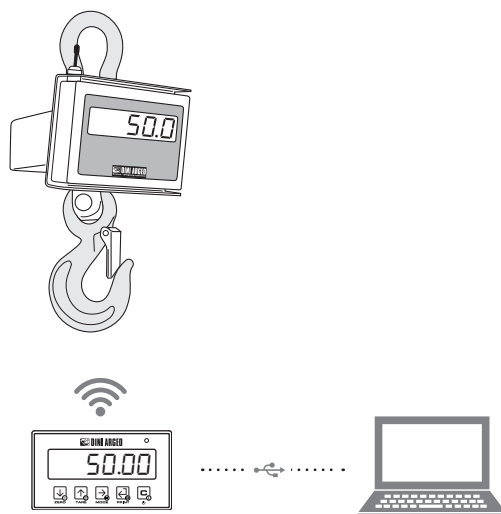

The power supply via the USB port excludes charging via a battery. Proceed as follows to charge the battery:


- Disconnect the USB cable
- Connect the battery charger to the DFWPM
- Connect the battery charger to the mains

Switching the system on

Single weighing scale system

1. Switching on the weighing scale
2. Switching on the DFWPM


DFWPM connects itself automatically and displays the weight.

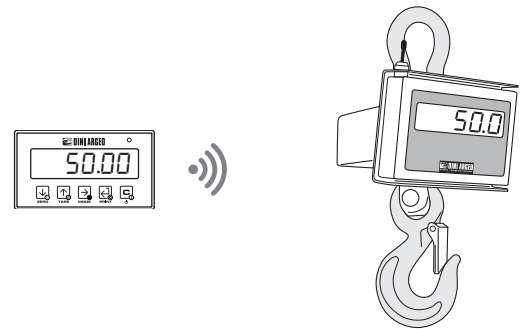

Multiple weighing scale system

1. Turn on all the weighing scales
2. Switching on the DFWPM

DFWPM connects itself automatically and displays the total weight.

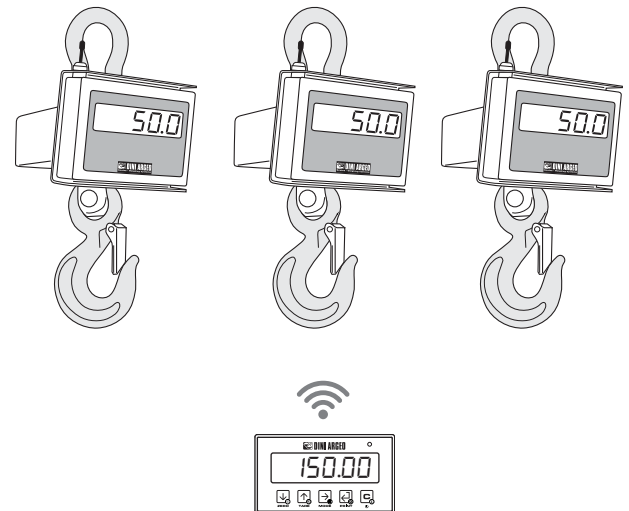

i

One can also only use part of the available weighing scales, proceed as follows:

1. Turn on all the desired weighing scales
2. Turn on the DFWPM

DFWPM connects itself automatically and displays the weight of the first available platform.

Press and hold down the MODE key to switch to the display of the total weight of the connected weighing scales.



The “Eco n” message permanently shown on the display indicates that the DFWPM is trying to communicate with weighing scale “n” without a reply.

Check whether the weighing scale is on. If the problem persists, contact the technical support service.

Switching the system off

 
1. Switch off each weighing scale individually
2. Switch off **DFWPM** by pressing and holding down key **C** for a long time.



When **DFWPM** shows the message “**EE n**”, it can be turned off by pressing and holding down key **C**.

How to identify the weighing scale displayed by the DFWPM (in multiple weighing scale systems)

The icons light up individually to repeatedly the weighing scales repeatedly or turn on at the same time to indicate that the displayed weight is a sum.



Icons of the active weighing scales (individually, in total or various combinations)

How to repeat the single weighing scale or display the total weight

If the DFWPM is connected to multiple weighing scales:

- Press the **MODE** key on the DFWPM to switch from one weighing scale to the next.
- Press and hold down the **MODE** key on the DFWPM for a long time to display the total weight on the connected weighing scales.



Calculating the tare in sum mode

One can perform the manual or semi-automatic tare of the sum (in both cases, the PT symbol is activated on the LCD display). Press TARE on the DFWPM and hold it down until the display shows “000000”: enter the tare value by using keys. Use key to confirm. The value is subtracted from the weight and the light turns on. If the entered value is not multiple of the minimum division of the weighing scale, it will be rounded up.

HOW TO USE IT

Features of the DFWPM keypad

The following table shows the keys repeated by the DFWPM, depending on the connected weighing scale:

DFWPM	TYPE OF WEIGHING SCALE			
	3590 keypad	CPWE keypad	DGT keypad	DFW keypad
ZERO	ZERO	F6	ZERO	ZERO
TARE	TARE	TARE	TARE	TARE
MODE (*)	RIGHT ARROW	F9	MODE	MODE
ENTER / PRINT	ENTER	ENTER	ENTER	ENTER
C	C	C	C	

(*): key repeated only if the DFWPM is connected to a single weighing scale.



The function of the keys of the connected weighing scale is described in the relative operating manual.

The display



Number	Symbol	Description
(1)		Battery level.
(2)		Icons of the active weighing scales (individually, in total or various combinations).

LETTERS:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
A	b	c	d	E	F	G	h	i	J	K	L	M	n	o	P	q	r	S	t	u	U	V	H	Y	Z

NUMBERS:

0	1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8	9



The display repeats any other active icons on the connected weighing scale. Refer to the operating manual of the weighing scale for more information.

DFWPM “USB” VERSION

The “USB” version allows you to save weighing operations in real time and download them on a PC via USB port for subsequent processing.

The memory can contain up to 500 weighing operations for internal-use applications or 250 weighing operations in the version type-approved for relationships with third parties (with Alibi memory).

The data saved at each weighing operation is:

- progressive weighing number
- number of the weighing scale used
- date and time
- gross weight
- tare weight (which is always zero).
- net weight (which is equal to the gross weight, even if the tare has been calculated)
- weighing operation code in the Alibi memory (if there is one)
- unit of measurement

Features of the keypad

The following table shows the keys repeated by the DFWPM, depending on the connected weighing scale:

DFWPM “USB”	TYPE OF WEIGHING SCALE			
	3590 keypad	CPWE keypad	DGT keypad	DFW keypad
ZERO	ZERO	F6	ZERO	ZERO
TARE	TARE	TARE	TARE	TARE
C	C	C	C	



The function of the keys of the connected weighing scale is described in the relative operating manual.


DFWPM “USB”	SPECIFIC FUNCTIONS OF THE “MODE” AND “PRINT” KEYS		
	Key pressed briefly	Key pressed and held down - 3 seconds	Key pressed and held down - 5 seconds
MODE	Selection of the weighing scale to display	View of the total weight of the connected scales	Numerical input of the weighing scale to the displayed (*)
ENTER / PRINT	Save weighing operation	Calculate and save the total weight of the weighing operations performed (*)	Access to the “download” mode of the weighing operations



(*) This function requires advanced configuration.

SPECIFIC FUNCTIONS FOR THE DFWPM “USB” VERSION

How to save a weighing operation

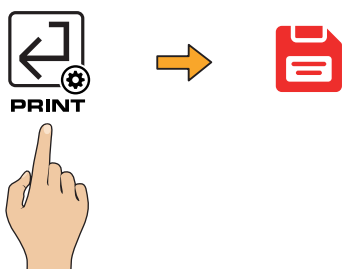

i

If the MASTER is showing the sum, the total weight will be saved.


How to calculate the total weight of the weighing operations performed and save it

You can save the total weight of the weighing operations carried out and save it by proceeding as follows:

a.



b. Confirm by pressing PRINT.

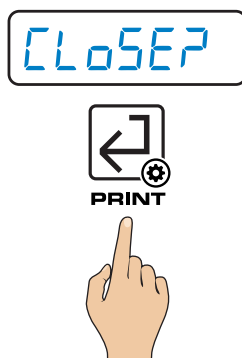

c.



The total weight will keep on flashing on the display for 5 seconds.

i


Press C to cancel the saving stage.

i

This function requires advanced configuration.

Download the list of weighing operations on a PC

1. Launch the Dini Argeo “WeighConsole” software.

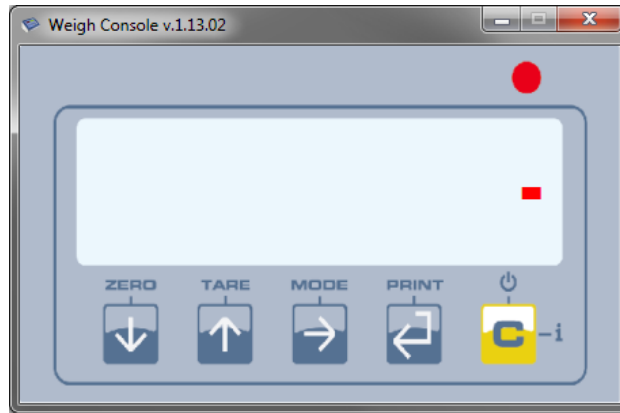

2. Enter the “download weighing operations” mode

a.



5 sec.

b.



The display shows “Pc .HA it” until the communication between the DFWM “USB” and PC is active.

c.



When the connection has been completed, the display shows “Pc .Conn”.

3. “WeighConsole” loads and automatically displays the available weighing list.


RECORD	SCALE	DATE TIME	GROSS	TARE	NET	ALIBI-ID	UM
1	SUM	09/10/17 11:18	305,0	0,0	305,0	00000...	kg
2	SUM	09/10/17 11:18	906,0	0,0	906,0	00000...	kg
3	SUM	09/10/17 11:18	120,0	0,0	120,0	00000...	kg
4	SUM	09/10/17 11:18	738,0	0,0	738,0	00000...	kg
5	SUM	09/10/17 11:18	147,0	0,0	147,0	00000...	kg
TOTALE		09/10/17 11:18	2216,0	0,0	2216,0	kg	

i


The Alibi memory ID number appears only if the Alibi memory option is in place.

Saving the list of weighing operations

The list can be saved by pressing the “Save List” key. The list is available as a .csv or a .xls file.

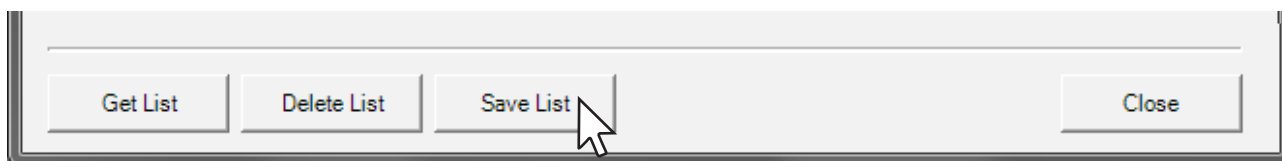

EXAMPLE:
.csv file

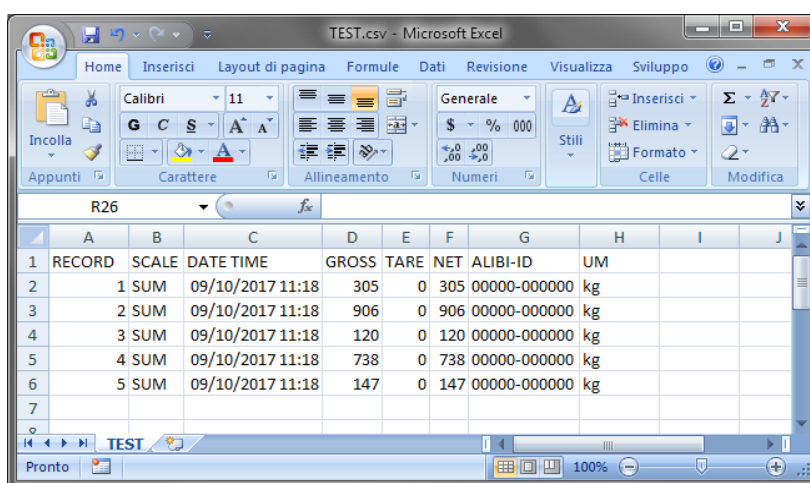

A screenshot of a Microsoft Excel spreadsheet titled 'TEST.csv'. The spreadsheet contains a table with the following data:


RECORD	SCALE	DATE TIME	GROSS	TARE	NET	ALIBI-ID	UM
1	SUM	09/10/2017 11:18	305	0	305	00000-000000	kg
2	SUM	09/10/2017 11:18	906	0	906	00000-000000	kg
3	SUM	09/10/2017 11:18	120	0	120	00000-000000	kg
4	SUM	09/10/2017 11:18	738	0	738	00000-000000	kg
5	SUM	09/10/2017 11:18	147	0	147	00000-000000	kg



The Alibi memory ID number appears only if the Alibi memory option is in place.

Deleting the list of weighing operations

The list can be deleted by simply clicking “Delete List”.

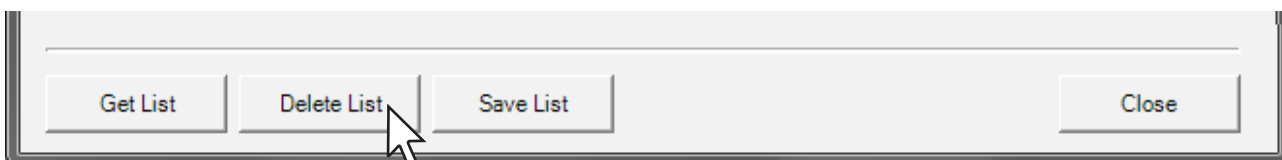

End the communication between the DFWPM “USB” and the PC.

1. Exit the “download weighing operations” mode

a.




b.



DFWPM “USB” reconnects itself to the available weighing scales and displays the weight.

2. Close the “WeighConsole” program

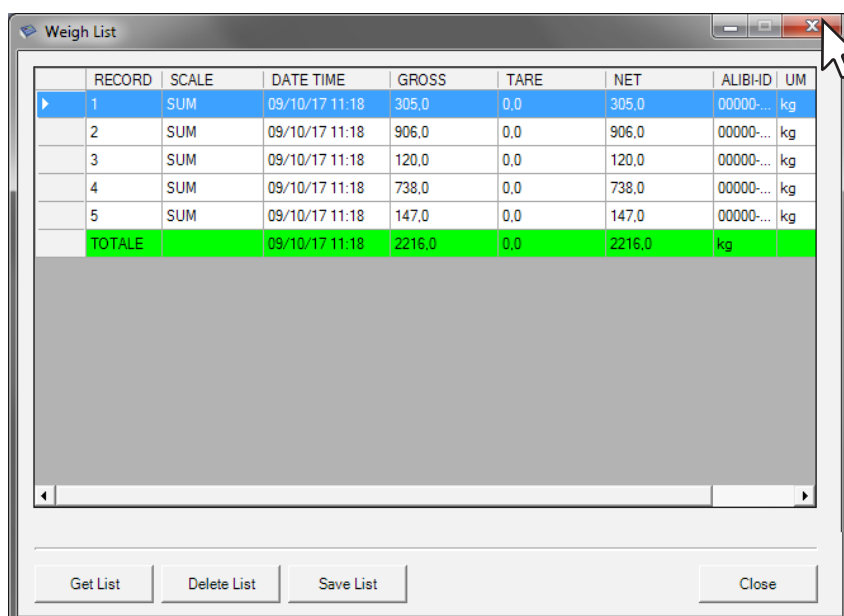

MESSAGES OF THE INSTRUMENT DURING USE

MESSAGE	DESCRIPTION
<i>Eco.H</i>	Displayed for a moment if the master is able to connect to the slave X; if the connection is not possible, the message remains fixed and the master emits a beeping signal.
<i>ΠΕΠ.HHH</i>	Displayed for a moment when the weight is saved.
<i>PC .ΒΡ .t</i>	The indicator is connecting to the PC.
<i>ΕΠΡtY</i>	Empty weighing operation list. The connection with the PC could not be established.
<i>dEL . . .</i>	Deletion of the list of weighing operations in progress.

NOTES

NOTES

This publication, or any part of it, cannot be reproduced without the Manufacturer's written authorisation. All the information reported in this manual is based on data available at the time of publication. The Manufacturer reserves the right to make changes to its products at any time, without prior notice and without incurring in any penalty. We therefore recommend you always check if there are any updates.

The person responsible for using the weighing scale must ensure all the safety regulations in place in the country of use are applied, guarantee that the appliance is used in keeping with its intended use and avoid any hazardous situation for the user.

The Manufacturer declines any responsibility deriving from any weighing errors.



HEAD OFFICE

Via Della Fisica, 20
41042 Spezzano di Fiorano, Modena - Italy
Tel. +39.0536 843418 - Fax. +39.0536 843521
info@diniargeo.com

SERVICE ASSISTANCE

Via Dell'Elettronica, 15
41042 Spezzano di Fiorano, Modena - Italy
Tel. +39.0536 921784 - Fax. +39.0536 926654
service@diniargeo.com

Authorised assistance centre stamp

