# 920i<sup>®</sup> FlexWeigh Systems

Bulkweighers and Flip Flop Fillers



# CONTROLLERS INDICATORS /

#### Approvals



Available with models 107, 108 and 109

Standard Switches	107	108	109
E-Stop mushroom	Х	Х	Х
Start/Resume	Х	Х	Х
End cycle	Х	Х	Х
Ship/Recv	-	-	Х

Standard Inputs	107	108	109
Fill gate closed	Х	Х	Х
Discharge gate closed	Х	Х	Х
Surge hopper not full	Х	Х	Х
Weigh hopper not full	Х	Х	Х
Printer online	X	Х	Х

Standard Outputs	107	108	109	
Slow cycle alarm	OPT	OPT	OPT	
Gate alarm	OPT	OPT	OPT	
Scale over fill alarm	OPT	OPT	OPT	
Lower surge alarm	OPT	OPT	OPT	
Printer alarm	OPT	OPT	OPT	
Open fill gate	Х	Х	Х	
Open discharge gate	Х	Х	Х	

#### Part Number/Price

Part #	Description	Est. Weight	Price
207906	920i FlexWeigh Systems 107	23 lb	Consult
207907	920i FlexWeigh Systems 108	23 lb	Consult
207908	920i FlexWeigh Systems 109	23 lb	Consult
207909	920i FlexWeigh Systems 111	23 lb	Consult
207910	920i FlexWeigh Systems 112	23lb	Consult

### **107** Shipping Bulkweigher

The 920i FlexWeigh 107 is designed for basic shipping-mode bulkweighing applications. In shipping mode, a scale is loaded and discharged repetitively until the accumulated weight meets the overall target value.

#### **108 Receiving Bulkweigher**

The 920i FlexWeigh 108 is designed for basic receiving mode bulkweighing applications. In receiving mode, a scale is loaded and discharged until there is no more product to receive. To end the cycle, the End Cycle button is pressed.

#### 109 Ship/Receive Bulkweigher

The 920i FlexWeigh 109 allows the user to select which mode of operation to use. This is done with a three-position locking key switch.

#### 111 Flip Flop Filler

The 920i FlexWeigh 111 is designed for filling two scales to a target weight in sequential "flip-flop" fashion. As one scale is filled, operators can prep the second scale, e.g., moving a container into place.

## **112 Flip Flop Filler with Discharge**

The 920i FlexWeigh 112 is designed for filling two scales to a target weight in sequential "flip-flop" fashion. As one scale is filled, the second scale is discharged via independent or manual methods.

#### **Options/Accessories**

Part #	Description	Price
151848	920i FlexWeigh Systems 107/108/109 manual	Consult
To have your option factory installed, please specify when		

placing your order.

#### **Optional Switches** Installed Price: \$150.00

	Туре	107	108	109
Manual/Off/ Auto	3 position key selector	Х	Х	х
Man Fill On/-/Jog	Maintained/Off/ Spring Return		х	х
Man Disch On/-/Jog			Х	Х

554

Manufacturer-Approved DIRECT REPLACEMENT FOR FLEXWEIGH'S DWM-IV

Front panel switches E-Stop, Start/Resume, End

**Standard Features** 

.

•

• Wall mount stainless steel enclosure

• Application program 107, 108, 109

Cycle, Ship/Recv (only 109)

Printer online checking

• Transmitted audit trail

Diaital I/O board

Options

· Softkeys for presets, ID1 and ID2 Accumulating weight streaming

• Relay rack and SSR relay outputs

• Pilot lights for error indication

· Manual override switches

Fill and discharge sequence controls Fill and discharge gate monitoring

• Weigh and surge hopper overfill monitoring