


## MVS Truck Scale Weigh Module

## Part Number/Price

Ref #	Part#	Description	Price
<b>Rated Capacity: 10,000 lb – 25,000 lb</b>			
1	71203	Base	Consult
2	71205	Upper chair	Consult
3	71373	Load link	Consult
4	44382	Leveling bolt	Consult
5	14772	Load cell bolt	Consult
6	15177	Plain washer	Consult
7	17778	Ground strap	Consult
8	14886	Machine screw (1/4 in x 28 in x 1/2 in)	Consult
9	15147	Lock washer	Consult
<b>See current load cell guide for complete line of load cells</b>			
	41890	Load cell, RL75058 - 10,000 lb (Non-NTEP)	Consult
	34314	Load cell, RL75058 - 20,000 lb	Consult
	34315	Load cell, RL75058 - 25,000 lb	Consult
	49940	Installation manual	Consult
<b>Rated Capacity: 50,000 lb – 75,000 lb</b>			
1	61148	Base	Consult
2	46440	Upper chair for SR Series Truck Scale (new style)	Consult
2	45683	Upper chair for EZ Series Truck Scale (old style)	Consult
3	50101	Load link	Consult
4	44382	Leveling bolt	Consult
5	37888	Load cell bolt	Consult
6	15184	Plain washer	Consult
7	17779	Ground strap	Consult
8	14886	Machine screw (1/4 in x 28 in x 1/2 in)	Consult
9	15147	Lock washer	Consult
<b>See current load cell guide for complete line of load cells</b>			
	34317	Load cell, RL75058 - 50,000 lb	Consult
	34318	Load cell, RL75058 - 60,000 lb	Consult
	34319	Load cell, RL75058 - 75,000 lb	Consult
	39516	Load cell, RL75058 - 75,000 lb with 60' of cable	Consult
	49940	Installation manual	Consult
<b>Rated Capacity: 100,000 lb and 125,000 lb</b>			
1	68544	Base	Consult
2	68990	Upper chair	Consult
3	68549	Load link	Consult
4	44382	Leveling bolt	Consult
5	68656	Load cell bolt	Consult
6	68655	Plain washer	Consult
7	17780	Ground strap	Consult
8	14886	Machine screw (1/4 in x 28 in x 1/2 in)	Consult
9	15147	Lock washer	Consult
	34320	Load cell, RL75058 - 100,000 lb	Consult
	34321	Load cell, RL75058 - 125,000 lb	Consult
	49940	Installation manual	Consult

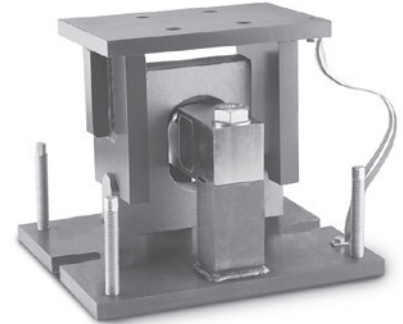

(See Diagram MVS-A)

