

Operator Card - 590AG Livestock Digital Weight Indicator



Failure to heed may result in serious injury or death.
DO NOT allow minors/inexperienced people to operate.
DO NOT operate without all shields and guards in place.
DO NOT use for purposes other than weight taking.
DO NOT place fingers into slots or possible pinch points.
DO NOT use any load bearing component that is worn beyond 5% of the original dimension.
DO NOT use this product if any components are cracked.
DO NOT exceed the rated load limit of the unit.
DO NOT make alterations or modifications to the unit.
DO NOT remove or obscure warning labels.
Keep body and loose clothing away from moving parts.

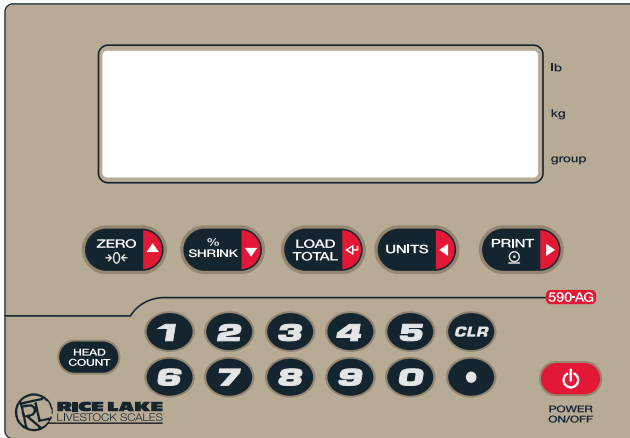


FIGURE 1. Indicator Front Panel

RICE LAKE
WEIGHING SYSTEMS

To be the best by every measure®

230 W. Coleman St • Rice Lake, WI 54868 • USA

TEL: 715-234-9171 • FAX: 715-234-6967

www.ricelake.com • m.ricelake.com

Indicator Operations

Power Scale

1. Press to turn the indicator on or off.

Enter Shrink

Shrink value is applied to the gross weight and is limited to 0.00-99.00 percent.

2. Use numeric keypad to enter a shrink value.

3. Press .

Note This shrink factor will be applied to every weightment until it is changed or the indicator is reset.

Enter Head Count

1. Load animals on scale.
2. Use keypad to enter the number of animals on the scale.
3. Wait for .
4. Press .
5. The head count, gross weight and shrink data is sent to the printer and stored in the accumulator.
6. Repeat for each group of animals to be weighed.

Load Total

Load total sends the total gross weight, head count, average weight per animal and the net weight with shrink data to the printer.

1. Wait for .
2. After final group is weighed, press .

Note This also clears the internal load total accumulator and turns group mode annunciator off.

General Operation

Print Ticket

Print has two different outputs based on the group mode state.

- If indicator is **not** in group mode, PRINT will output the gross weight displayed.
- If indicator is in group mode, PRINT will reprint the group data of the last group weighed.

Note The reprint of a ticket does not require the scale to be at a standstill.

1. Wait for .
2. Press to send data to the serial port.

Toggle Units

1. Press to switch between pounds (lb) and kilogram (kg) units.

Note The units annunciator arrow on the right side of the LCD display points to the units identifier.

Units cannot be changed once a group has been started.

Zero Scale

1. In gross mode, remove all weight from the scale and wait for to display.
2. Press . lights to indicate the scale is zeroed.

Refer to Operator's Manual (PN 154974) for detailed instructions
Manuals are available on our web site at

www.ricelake.com/manuals