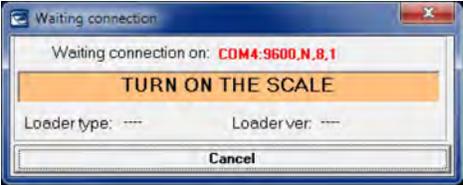
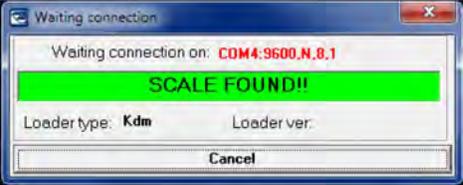


# Rice Lake Weighing Systems

## SCT-1100, SCT-2200, LaserLT-60 and LaserLT-100

### Loading Firmware

To load SCT-1100, SCT-2200 and LaserLT-60 and LaserLT-100 firmware onto an indicator from a PC:

	<ol style="list-style-type: none"><li>1. Copy the included *.exe file to the desktop of the PC.</li><li>2. Connect the indicator to the PC.</li><li>3. Double click on the *.exe file.</li><li>4. Select the COM port (of the PC) that is connected to the indicator. If using a USB/Serial converter, it is necessary to check the box "USB-&gt;COM".</li><li>5. Press OK.</li></ol>
	<ol style="list-style-type: none"><li>6. Turn on the indicator to start loading firmware to indicator.</li></ol>
	<ol style="list-style-type: none"><li>7. The message to the left displays automatically when the PC has discovered the indicator and the indicator is ready to be updated.</li></ol>
	<ol style="list-style-type: none"><li>8. Updating will start automatically.</li></ol>
	<ol style="list-style-type: none"><li>9. A dialog box displays if the update procedure is completed successfully.</li><li>10. Restart the indicator and perform a system default.</li></ol>



© Rice Lake Weighing Systems Specifications subject to change without notice.  
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA  
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319