

Settings to Work Direct With Indicator



Important

These steps **MUST** be followed to eliminate the need to press the **SEL/MENU** button, to switch the printer from energy saving mode to print mode, prior to each print.

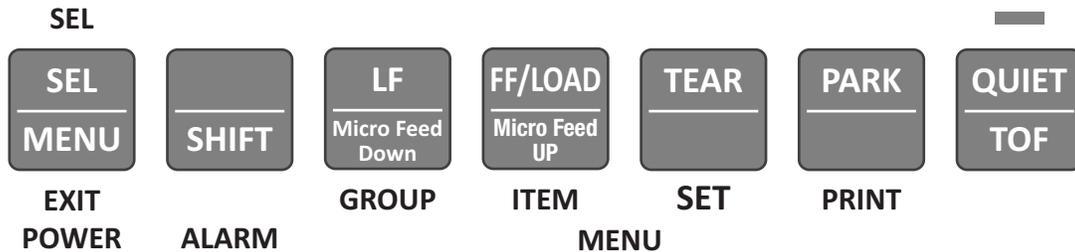


Figure 1. Key Panel

1. To place the printer in the *Menu Mode*, hold the **SHIFT** button while pressing the **SEL** button (printer either selected or deselected). The **MENU** light will come on, if the printer was selected, the **SEL** light will go out.
2. Press **GROUP** to scan through the listings until **SETUP** is reached.
 - Each time the **GROUP** button is pressed, a line will print, showing the next group in the Menu.
 - To go back one group, hold the **SHIFT** button while pressing the **GROUP** button.
3. Press **ITEM** to scan through items, until *Print Suppress Effective*.
 - Each time **ITEM** is pressed a line will print showing the next item within the group.
 - To go back one item, hold the **SHIFT** button while pressing the **ITEM** button.
4. Setup Print Suppress Effective.
(Selections – **Yes** (default), **NO**)
 - This is an energy efficient mode. The printer has to be turned on from the front panel and requires the press of a button to activate.
 - If **NO** is selected, it is on all the time.
5. Press **SET** to change the settings for the items.
 - Each time the **SET** button is pressed a line will print across the page showing the next setting for that item.
 - Continue pressing the **SET** button until the desired setting is displayed.
 - To go back one setting, hold the **SHIFT** button while pressing the **SET** button.
6. Exit the Menu Mode by holding the **SHIFT** button, then press the **SEL** button. The **MENU** light will go out and the **SEL** light will come on.



Note It is recommended to jumper pins 4 and 5 (RTS) and pin 6 (DSR) to 20 (DTR) on the serial cable if hand-shaking is not available in the application.

Pin	Signal	Symbol	Direction
1	Protective Ground	PG	
2	Transmitted Data	TD	From Printer
3	Received Data	RD	To Printer
4	Request to Send	RTS	From Printer
5	Not Used		
6	Data Set Ready	DSR	To Printer
7	Signal Ground	SG	
8-10	Not Used		
11	Supervisory Send Data	SSD	From Printer
12-19	Not Used		
20	Data Terminal Ready	DTR	From Printer
21-25	Not Used		

Table 2. Pin Assignments

Internal Handshaking Specification Setting

1. Push **SHIFT**, then **SEL** to enter the menu.
2. Push **GROUP** nine times to enter **Serial Settings**.
3. Push **ITEM** six times to change the **DSR** signal to **Invalid**.
4. Exit the menu.



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319

www.ricelake.com www.ricelake.mx www.ricelake.eu www.ricelake.co.in m.ricelake.com