

Panel Mount Option

PN 52948

Use the following procedure to install the panel mount option.



Note *The panel mount bezel gasket meets NEMA 12 requirements for dust-proof installations.*

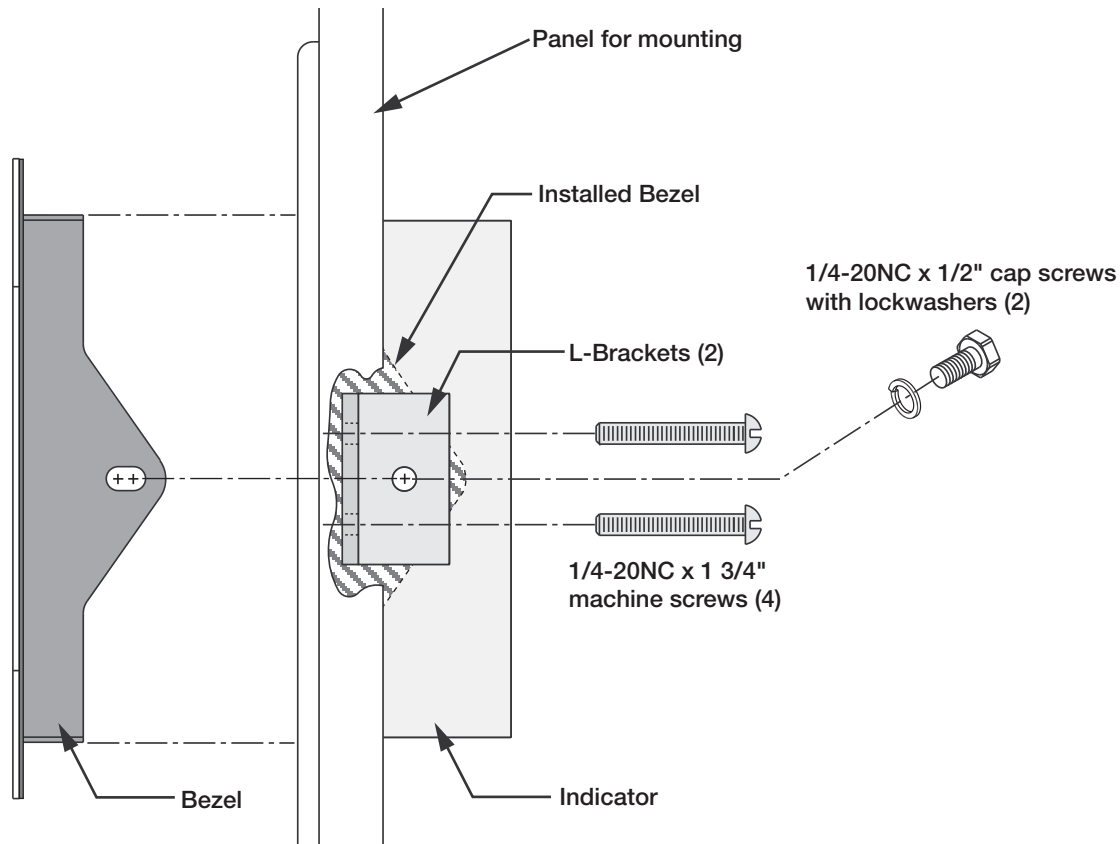


Figure 1. Panel Mount Kit Components

1. Use the cutout template to make a 9.8" W x 6.3" H (249 mm W x 160 mm H) cutout in the panel. Ensure cutout is far enough from panel edge to accommodate bezel.
 - Panel mount bezel dimensions are 10.5" W x 7.0" H (267 mm W x 178 mm H).
2. If attached, remove the tilt stand from the indicator enclosure.
3. Peel adhesive backing from the bezel gaskets, then press bezel into the panel cutout.
4. Insert the indicator into the panel mount bezel from the rear. Align holes in side of indicator enclosure with holes in the bezel flange.

5. Use the 1/4-20 x 1/2" cap screws and lock washers provided to attach the L-brackets to the outside of the installed bezel and indicator.
6. Start the four 1/4-20NC x 1 3/4" round-head machine screws into the panel mount brackets. Place a few drops of a removable-strength thread adhesive (such as Loctite®) on the screw threads to prevent loosening in high-vibration environments. Tighten screws until the indicator is held securely against the panel. Figure 2 shows a top view of a completed panel mount installation.

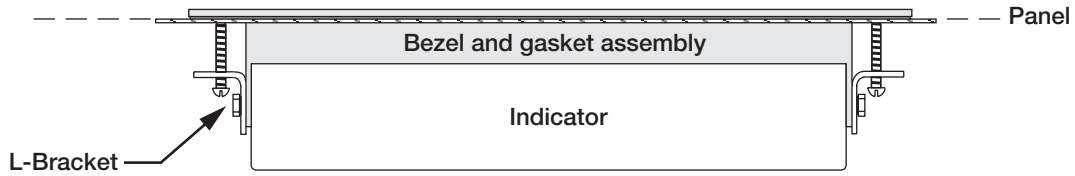


Figure 2. Panel Mounted Indicator (Top View)

See the Indicator Technical Manual, for more information about installation procedures and requirements.



This manual can be viewed or downloaded from the Rice Lake Weighing Systems website at www.rlws.com.

RICELAKE[®]
WEIGHING SYSTEMS
To be the best by every measure[®]

© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0) 88 2349171

www.ricelake.com www.ricelake.mx www.ricelake.eu www.ricelake.co.in m.ricelake.com