


**Important:**

- To install the ball mount, attach the ball mount to the bottom of the printer as shown in *Figure D* using the hardware supplied.
- To connect power, use the table at the right to connect to a power source.
- To connect Serial I/O, use the table at the right to connect to an RS-232 host. You may also use the Serial I/O connector on the left side of the printer using an optional cable. Note that only one connector may be connected at a time.
- To load media, always use **Genuine Printek Media** to ensure optimal performance.
  - Move the Paper Door Release in the direction indicated in *Figure A* and open the Paper Door.
  - Move the media support by pressing in the area indicated by the arrow in *Figure B* and place the roll between the supports. Make sure the media rotates freely. Lay the leading edge of the media through the print head as shown in *Figure C*, and close the door firmly.
- To perform a self test, press and hold the Paper Feed Button while turning on the printer with the Power Button.


**Serial I/O & Power Cable #92282**

Pin	Color	Description
1	-	NC
2	White	Receive Data (From Host)
3	Green	Transmit Data (From Printer)
4	Brown	NC
5	Black	Ground
6	-	NC
7	-	NC
8	Red	Power (8-32 VDC)
9	-	NC
	Shield	Connector Body


**Note:** For more information, refer to the *MtP400 Series Operator's Manual*. You may download this manual at [www.printek.com](http://www.printek.com).

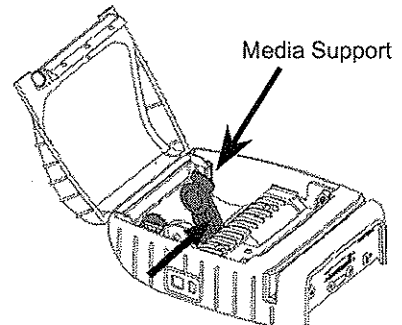


**Figure B**

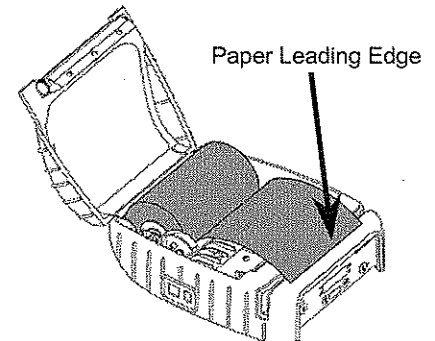

**Figure C**

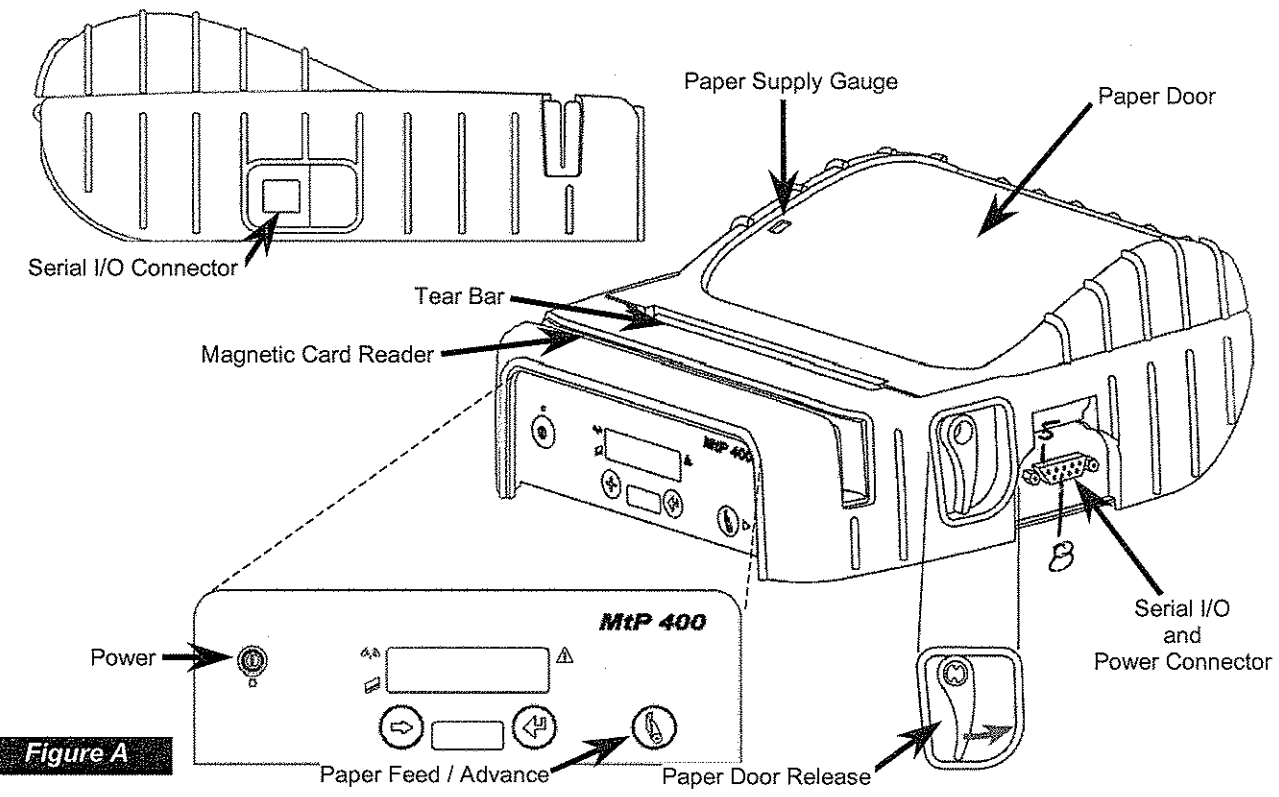

**Figure A**

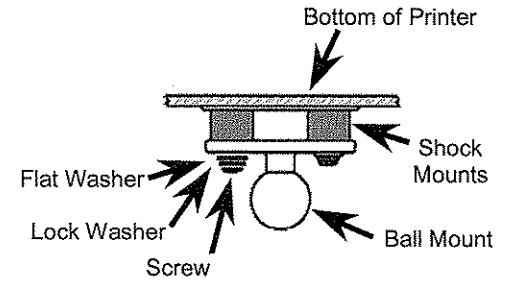

**Figure D**