

Disable the Buzzer


Follow the steps below to disable the buzzer.

1. Hold **REZERO** key while entering 141 on the keypad.
2. Press the **+** (**Plus**) key once.
3. Type 1000, then press the * **CONFIRM** key.
4. Press the **TARE** key.
5. Power down the scale.
6. Restart the scale, buzzer will be disabled.

Calibrating

Follow the steps below to calibrate the scale.

1. Turn on scale and press the span switch, located on the bottom of scale.
2. Press and hold the **REZERO** key while entering 8715 on the keypad.
3. The scale will display **CAL00**.

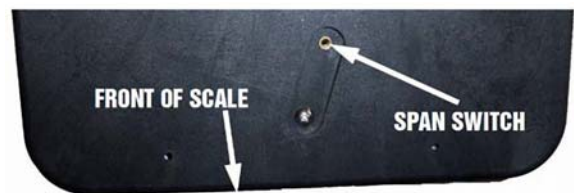

Note If **CAL00** does not display, restart scale and repeat steps 1-3.

4. With **CAL00** displayed, make sure platter is empty (no weight) and press the * **CONFIRM** key.
5. Add test weight to platter (30 lbs is recommended). Make sure 30.00 is displayed on screen and press the * **CONFIRM** key.



Note If using less than 30 lbs use the **CLEAR (c)** key to toggle between the different calibration choices.

6. Power down the scale and restart to save the calibration.



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0) 88 2349171

www.ricelake.com www.ricelake.mx www.ricelake.eu www.ricelake.co.in m.ricelake.com