

Versa-portion® RLP-S/SM

UF Error Message

Product: Versa-portion RLP-S/SM

Issue: UF error message when under pressure

Solution: Unscrew the bleeder screw 7 full rotations



Manuals are available from Rice Lake Weighing Systems at www.ricelake.com/manuals

Warranty information is available at www.ricelake.com/warranties

Pressure can build up in the scale during shipment causing a UF error message to display. Use the following procedure to relieve pressure from the unit:

1. Locate the bleeder screw on the bottom of the scale.



Figure 1. Bleeder Screw Location

2. Unscrew the bleeder screw 7 full rotations.



Figure 2. Unscrewed Bleeder Screw



IMPORTANT: Bleeder screw will fall out of position if unscrewed more than 7 times. Leave bleeder screw unscrewed while scale is in use.



© Rice Lake Weighing Systems Content subject to change without notice.

230 W. Coleman St. • Rice Lake, WI 54868 • USA USA: 800-472-6703 • International: +1-715-234-9171