

MSI9300

*PortaWeigh Plus Crane Scales
PortaWeigh Plus Hi-Torque Crane Scales*

Operator's Manual



**Measurement Systems
International™**

A RICE LAKE WEIGHING SYSTEMS COMPANY

MSI-9300 Porta-Weigh+ Crane Scale

TABLE OF CONTENTS

SECTION 1 – INTRODUCTION & INSTALLATION	3
Introduction	3
Installation	3
Battery Removal & Replacement	4
Battery Life.....	5
Battery Charger.....	5
FCC Statement.....	6
MSI-9300 Porta-Weigh Plus Display	7
Keyboard Operations.....	7
SECTION 2 – SCALE OPERATION	8
POWER	8
Multiple scale channels	8
ZERO.....	8
TARE	9
Special TARE Modes	10
NET/GROSS	10
UNITS	10
TEST.....	11
Internal Temperature Display	11
RF List.....	11
SECTION 3 – MSI-9300 SETUP MENU	12
Key Functions during Setup	12
Setup Menu Structure	12
User Key Function.....	13
Automatic Off.....	13
Units	14
Total.....	15
Automatic Temperature Display.....	16
RF LIST Scrolling	16
SECTION 4 – RF REMOTE CONTROL.....	18
Description	18
Functions	18
Setting the Transmitter Address.....	18
Contention Considerations	19
Battery Replacement	19
RF Remote Control FCC Statement.....	19
SECTION 4 – THE EMBEDDED CELLSCALE	20
Accessing The CellScale	20
Connection Procedure	20
Comm port Cable	20
Set Points.....	21
Password Protection	21
Scale Calibration	21
Calibration Procedure.....	22
CellScale Settings for MSI-9300.....	26
RF System Setup	27
Legal Standard.....	27
Setting the Legal Standard Mode	27
Legal-For-Trade Control Device	28
Sealing MSI-9300 Crane Scales.....	29
APPENDIX – SPECIFICATIONS & DIMENSIONS	31
Hardware Overview.....	31
General Features.....	31
General Specifications.....	32
Dimensions and Load Train Specifications, Standard MSI-9300	33
Dimensions and Load Train Specifications, MSI-9300HT	33
Options and Accessories.....	34
The MSI Limited Warranty	34



SECTION 1 – INTRODUCTION & INSTALLATION

INTRODUCTION

The Measurement Systems International MSI-9300 Series Porta-Weigh Plus Crane Scales are designed to provide a rugged weight indicator and data system for any type and size of crane used in industry. Two basic styles are available: MSI-9300 and MSI-9300HT. This guide is used for both versions as they have identical electronics.

The standard MSI-9300 is supplied with rotating hooks or shackle interfaces. The MSI-9300HT Hi-Torque version features a fixed load train that does not rotate and a new load cell design that withstands the induced torque associated with power assisted rotating loads. With options available for both top and bottom interfaces, the MSI-9300HT easily integrates with existing powered rotators to provide safe material handling and increased operational efficiency. The MSI-9300 Series combines CellScale technology with MSI’s advanced Crane Scale architecture providing both a local and remote display capability. Combined with CellScale accessory components, they become advanced data gathering networks suitable for process control, safety monitoring, and weight related data collection.




The circuitry is fully shock-mounted and water proof making a robust overhead weighing system for use indoors and out. The large 1.2” (30mm) ultra bright LED readable at distances up to 50’ (15m). Display brightness can be set to automatically adjust to ambient lighting conditions for optimum viewing and battery conservation.

The MSI-9300 Series crane scales can communicate with CellScale family indicators and modems at distances up to 1000’ (300m) outdoors (even further with gain antennas). Both fixed and handheld indicators are available, as well as Modems for direct connection to computers. A remote 4-20mA interface is available for direct connection to PLCs and other process control equipment. CellScale Virtual Monitor (CVM) software is available to enable your PC to act as a full-featured digital scale indicator with data logging capabilities.

INSTALLATION

The MSI-9300 installs easily by hanging it on the crane, using properly sized shackles. Follow proper loading procedures to ensure that side loading is eliminated. Please refer to MSI’s brochure, “Crane Safety” when installing model MSI-9300.

One of the most common installation problems is using an oversize

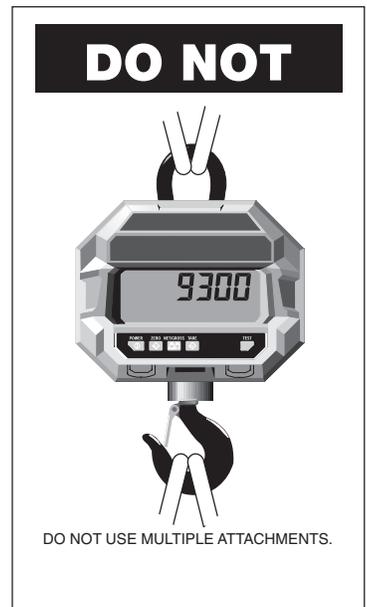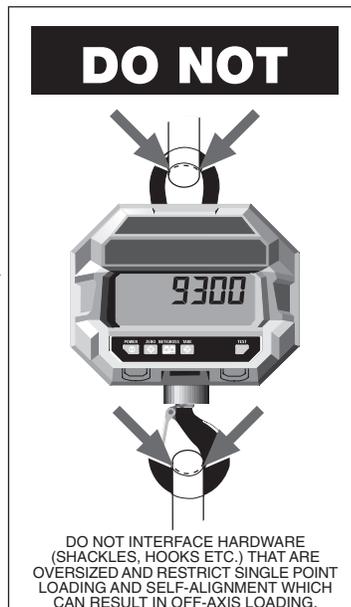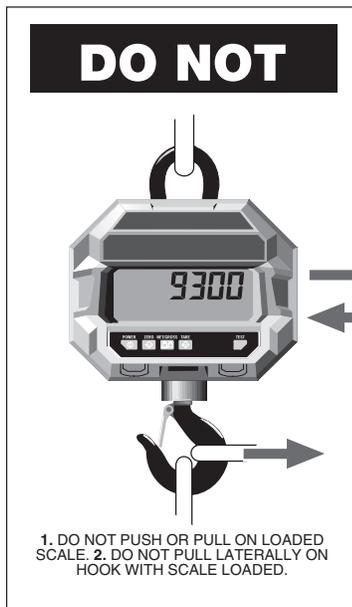

MSI-9300 Porta-Weigh+ Crane Scale


shackle or too large a hook to interface with the MSI-9300. This can cause off center loading and stress points that will reduce the life of the MSI-9300 lifting eye or hook. Use the appropriate interface hardware for the capacity of the scale. If your interface hardware does not fit properly, MSI can supply the MSI-9300 with oversize lifting eyes or shackle interfaces. If the crane hook is too large to fit in the lifting eye with single point interface, then install the scale using adaptive rigging.

If multiple attachments are needed, use a shackle or ring to attach the multiple lines to thus keeping a single point attachment to the scale. Single point attachments are necessary to ensure the safety and accuracy of the scale system.

Regular maintenance inspections of the lifting system should be performed to ensure safety. Pay particular attention for signs of stress on any element in the load train.

BATTERY REMOVAL & REPLACEMENT

- 1) Turn the crane scale Off.
- 2) With one hand, hold the battery access to prevent it from falling.
- 3) Rotate the two cam-latch knobs counter-clockwise until the plate latches disengage.
- 4) Carefully back the plate out of the battery well.
- 5) Release the battery retaining strap.

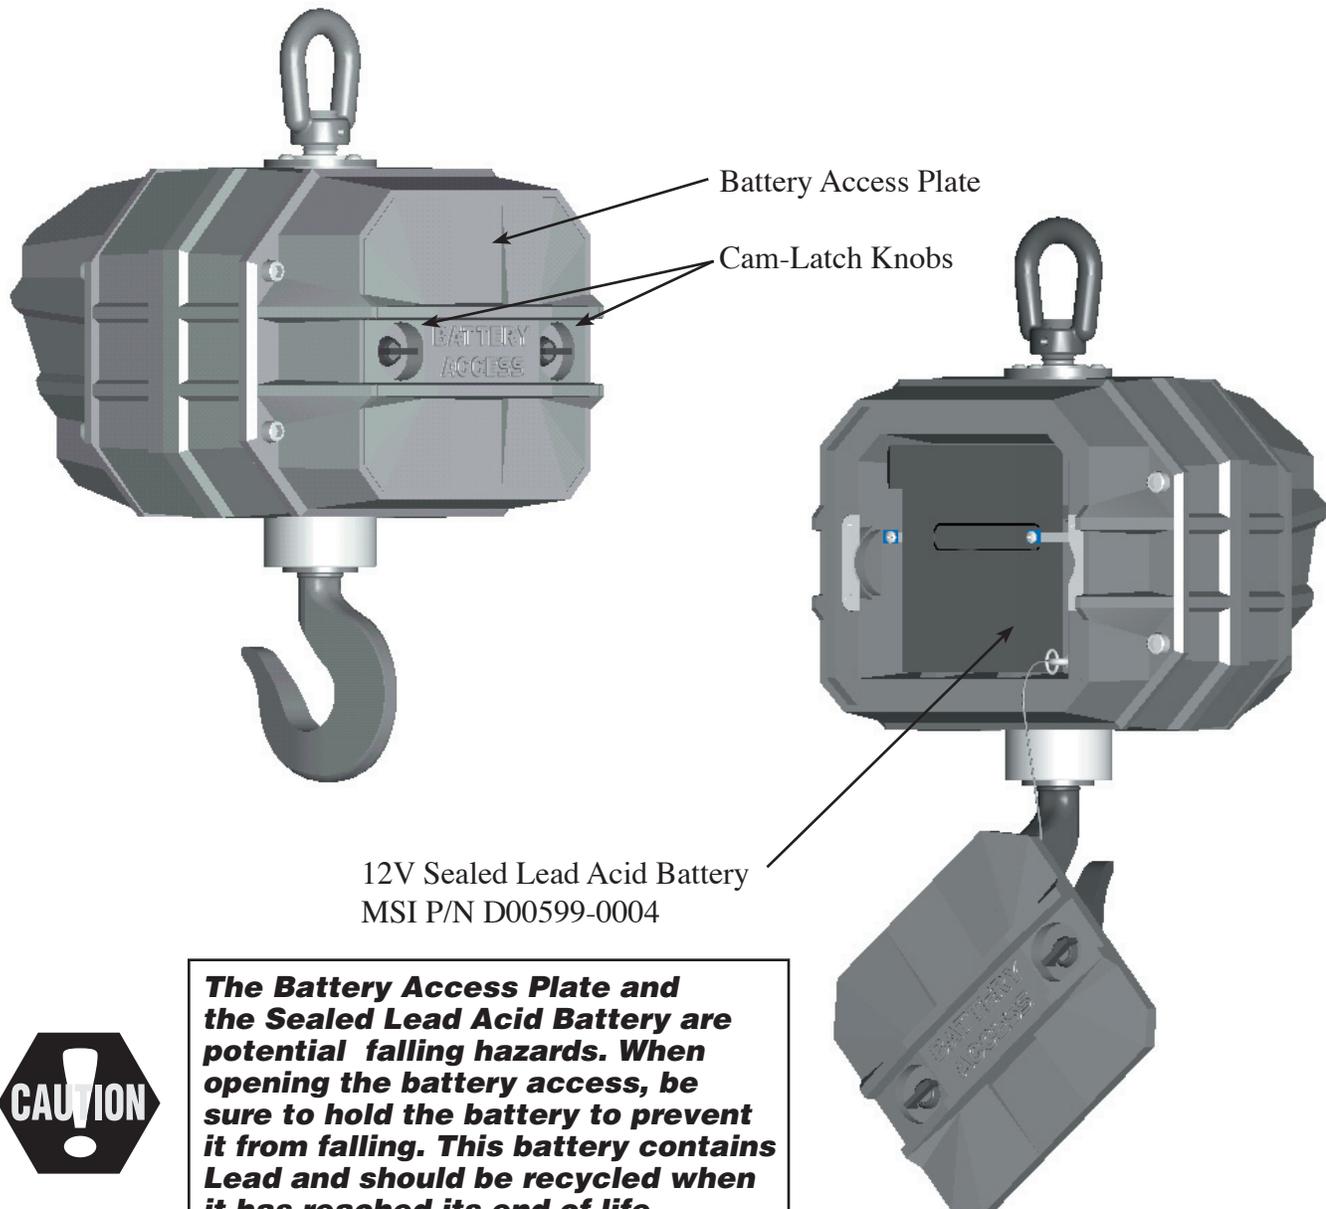



- 6) Remove the battery by pulling straight back.
- 7) Install a fully charged battery by plugging it in to the exposed battery jacks. The crane scale will turn on briefly then turn itself off.
- 8) Reattach the battery retaining strap.
- 9) Reseat the access panel.
- 10) Put pressure on the plate to partly compress the gasket. While applying pressure, turn the cam-latch knobs clockwise until the plate is reseated. Make sure the plate is firmly in place.

BATTERY LIFE

The MSI-9300 battery life depends on a number of factors: Brightness of the LED and number of segments lit, the amount of RF activity, and the age and condition of the SLA (sealed lead acid) battery. The MSI-9300 will automatically turn the scale off when the SLA battery drops to approximately 10.5V. You must recharge the battery when this happens. Leaving a discharged battery in the scale, which has a maintenance battery drain, can result in a deep discharged battery which will shorten its service life.

SLA batteries do not suffer from memory effects and actually benefit from frequent rechargings. Recharge the battery whenever it is convenient even when it still has available life. Due to the maintenance discharge imposed on the battery by the MSI-9300 electronics, **do not store the MSI-9300 more than 7 days with the battery inside.** Remove the battery.

Battery Use Guidelines

- 1) Recharge whenever convenient. Do not wait for the scale to shut itself off if your work situation permits.
- 2) If you need the scale continuously, keep a fully charged spare battery. Replace the drained battery as close as possible to the low battery warning, or earlier.
- 3) SLA Batteries that have not been deep discharged should withstand 500 to 1500 charging cycles.
- 4) The low battery warning will indicate about 2-4 hours of additional use before the MSI-9300 turns itself off.
- 5) If the MSI-9300 is not going to be used again soon, remove the SLA battery to prevent deep discharge while the unit is in storage.

BATTERY CHARGER

Each MSI-9300 Series crane scale is shipped with a battery charger (MSI P/N 502221-0001) designed to charge and maintain the battery. Exact charging time will depend on the degree of discharge of the battery. A battery removed when the low battery warning first appears should take about 4-6 hours to fully charge. A deep discharged battery might take 24 hours to recover.


Using the Charger

- 1) Remove the Battery from the 9300. See previous page for removal instructions.
- 2) Connect the charger assembly to the AC supply (86-260VAC). The Power Status light should be green. If the power status light fails to illuminate, check your AC power connection and make sure the VAC jack is fully seated.
- 3) Plug in the polarized connector to the jacks on the battery.
- 4) The Charge Status light should turn ORANGE indicating fast charge.
If the status light remains Green when the battery is first plugged in, the battery may be defective.
- 5) Charge until the status light turns GREEN.

Deep discharged batteries may require a couple days to recover full charge.

When the charge cycle is complete you can (and should) leave the battery on the charger until it is needed. The charger keeps a maintenance float charge on the battery to ensure the best possible operation times. For scales that are in high usage, MSI recommends obtaining a spare battery so one can always be on the charger.

MSI-9300 Porta-Weigh+ Crane Scale

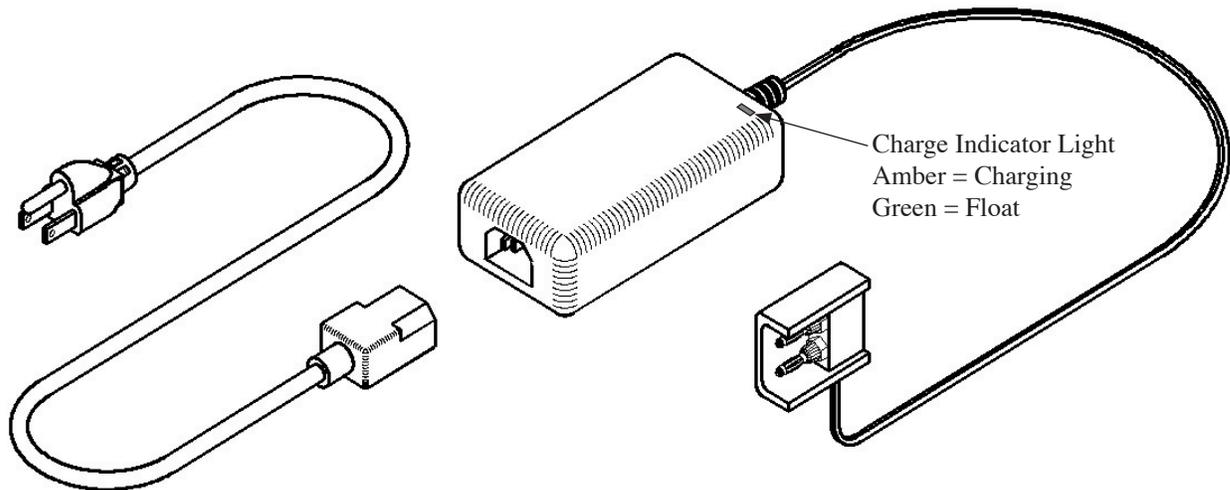

The charger is a universal input type and is rated for 100-240VAC, 50-60Hz. AC power cords suitable for any world location are available from MSI.

FCC STATEMENT


FCC ID: HSW-2450M

Note: This unit has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their expense.




MSI-9300 PORTA-WEIGH PLUS DISPLAY

The MSI-9300 has six 1.2” (30.5mm) ultrabright LED Digits along with annunciators. The brightness of the display is automatically adjusted to the lighting conditions. When the ambient light is dim, the LEDs are lower in intensity. When ambient light is bright, the LED intensity level is increased to allow sunlight readability.

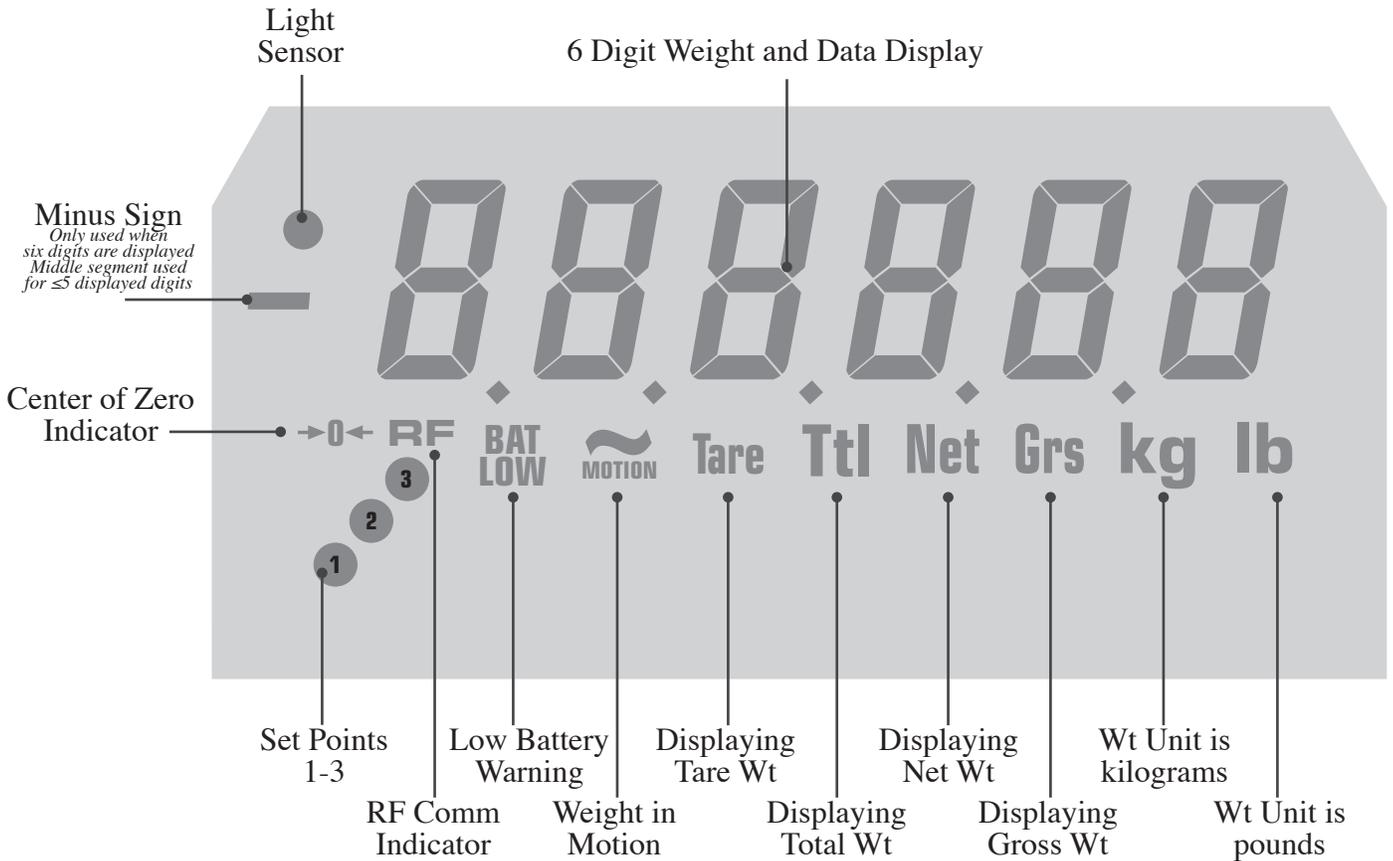

KEYBOARD OPERATIONS

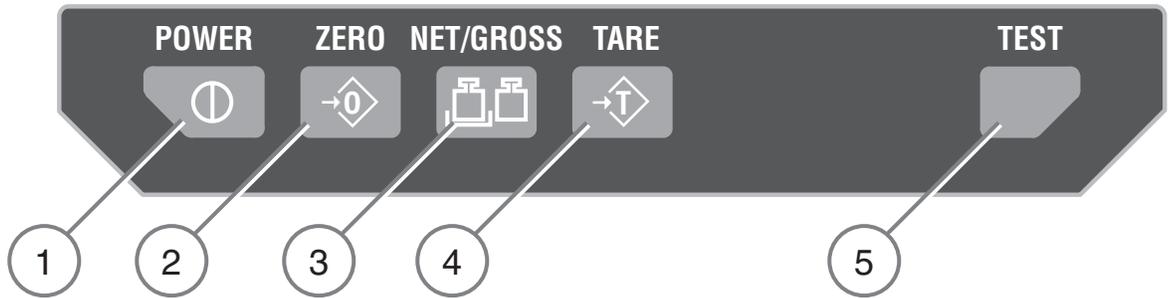

- 1) **POWER** – Push to turn the scale on or off.
- 2) **ZERO** – Used to zero the scale. The zero range is usually 100% of full scale unless prohibited by legal-for-trade settings.
- 3) **NET/GROSS** – Switches scale between NET and GROSS weight readings (assuming a Tare value has been stored).
- 4) **TARE** – When in GROSS mode, pushing TARE will zero any weight on the scale and cause the scale to go into the NET mode. When in NET mode, pushing TARE will display the TARE value for 2 seconds, then revert back to the NET weight display. In NET mode, pushing TARE twice will set a new Tare. Pushing TARE followed immediately by ZERO will clear the Tare value and revert the scale to Gross Mode.
- 5) **TEST/USER Key** – When pushed, this causes a display segment check, and provides battery and RF Network information. Also programmable for USER desired functions. See SETUP USER KEY. User Key Functions Available: Units (kg/lb) • Total • Scan List Increment (multi-channel systems) • °F/°C • Change Network (SW V3-33 and above) • Test (default)

MSI-9300 Porta-Weigh+ Crane Scale

SECTION 2 – SCALE OPERATION

POWER

To Turn On the Power

1) Push POWER. The system performs a display check: All segments and annunciators illuminate for 3 seconds.	1		8.8.8.8.8
2) The LED displays the firmware Rev number.	2		E00-25
3) Next, the display shows the Network address followed by the ID address. This is the operating network address for any slave device to log onto. <i>The network and ID Address are usually but not always the same. Numbers for Network range from 0 to 31 and for address from 0-254. Initially the MSI-9300 display will not know the Network address and will skip this step.</i>	3		nt 2
	3		id 2
4) The display begins a numeric test while the CellScale component is establishing Network and Comm Port connections. The count up pattern will continue for 10-20 seconds and will sometimes restart. This is normal.	4		000000
	4		11111
	4		222222
5) Once the RF Network is established and the Comm Port connection to the display is set the display will indicate “ConEct” [sic]. The scale is now ready for operation.	5		ConEct

MULTIPLE SCALE CHANNELS

MSI-9300 Series crane scales are capable of hosting multiple independent scale inputs. These are connected via RF using MSI-6260CS and/or MSI-9300 Series crane scales setup as Network Slaves, or by special order, additional inputs can be hard-wired directly. In addition, the CellScale Math channels can be used for manipulating the scale data. To directly access additional channels, the TEST/USER key can be programmed to “S List” to scroll through the available scale channels. See “USER KEY FUNCTION” in this manual. See the CellScale User Guide for the procedure to add additional channels. The crane scale’s keypad operates on the displayed channel only.

ZERO

Sets the zero reading of the scale. Use the zero key to take out small deviations in zero when the scale is unloaded. (See “TARE” for zeroing (Taring) package or pallet weights)

To Zero

Push ZERO. The weight reading must be stable within ± 1 division for the zero function to work. <i>The backup memory stores the zero reading, and can restore it even if power fails.</i>		
The numeric digits display “0” (or 0.0 or 0.00, etc.).		

Rules for Use:

- 1) Works in GROSS mode or NET mode. Zeroing while in Net mode will zero the gross weight causing the display to show the negative Tare value.
- 2) The scale must be stable. The scale will not zero if the motion detect annunciator is on.
- 3) The scale will accept a zero setting over the full Range of the scale (NTEP and other Legal-for-trade models may have a limited zero range). Zero settings above 4% of full scale will subtract from the overall capacity of the scale. For example if you zero out 100 lb. on a 1000 lb. scale the overall capacity of the scale will reduce to 900 lb. plus the allowed over-range amount.



TARE

Tare is typically used to zero out a known weight such as a packing container or pallet and display the load in NET weight. A Tare value is entered in one of three ways:

- 1) **AUTO TARE** – When the TARE key is pushed twice, the current weight is zeroed and Net Weight is displayed. This is the only Tare function available from the MSI-9300 keypad.
- 2) **KEYBOARD TARE** – Available from a 3750CS or 9750A Indicator only. Using the numeric keys, the operator keys in the desired Tare Weight then pushes the ENTER Key. See the 3750CS or 9750A User Guides.
- 3) **TARE UP/DOWN** – Available from a 3750CS Indicator only. Using the Scroll Keys, the Tare value is changed one scale division at a time. TARE UP/DOWN is useful for increasing or decreasing the current Tare value slightly. The Keyboard Tare and Tare Up/Down modes can be disabled through the use of SETUP TARE. In the “AUTO” mode a single push of the TARE key will enact AUTO TARE. See the 3750CS User Guide.

To Auto Tare (in Gross Mode)

<p>1) From Gross Mode, push TARE. The current weight is stored in the Tare register, the display mode changes to Net, and the display reads 0. All following readings are deviations from the set Tare value.</p>	<p>TARE</p>  <p>1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>0</p> <p>Net</p> </div> </div>
---	---

To Read the Current Tare Value

<p>1) From Net Mode, push TARE. The current weight stored in the Tare register is displayed for 2 seconds. Then the display mode reverts to Net Weight.</p>	<p>TARE</p>  <p>1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>1234</p> <p>Tare</p> </div> <div style="text-align: center;"> <p>4444</p> <p>Net</p> </div> </div> <p>2</p>
---	---

To Auto Tare (in Net Mode)

<p>1) From Net Mode, push TARE. The current Tare value is displayed.</p> <p>2) Within 2 seconds, push TARE again. Assuming no motion, the current Gross weight is stored to the Tare register, and the mode is set to Net weight with the new tare value. All following readings are deviations from the set Tare value.</p>	<p>TARE</p>  <p>1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>1234</p> <p>Tare</p> </div> <div style="text-align: center;"> <p>0</p> <p>Net</p> </div> </div> <p>TARE</p>  <p>2</p>
--	---

To Clear Tare and Revert to Gross Mode

Use the Net/Gross to return to Gross Mode without clearing the Tare value.

<p>1) From Net Mode, push TARE. The current Tare value is displayed.</p> <p>2) Within 2 seconds, push ZERO. The current Tare weight is cleared from the Tare register, and the mode is set to Gross weight.</p>	<p>TARE</p>  <p>1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>1234</p> <p>Tare</p> </div> <div style="text-align: center;"> <p>5565</p> <p>Gross</p> </div> </div> <p>TARE</p>  <p>2</p>
---	--

MSI-9300 Porta-Weigh+ Crane Scale

Tare - Rules for Use:

- 1) Only positive gross weight readings can be tared. Weight can be tared in both the NET and GROSS modes. When in the NET mode, the TARE is not cumulative, all the weight is zeroed.
- 2) The motion annunciator must be off. The weight reading must be stable.
- 3) Setting or changing the tare has no effect on the Gross zero setting.
- 4) Taring will reduce the apparent over range of the scale. For example, taring a 10 lb. container on a 60 lb. scale, the scale will overload at a net weight of 50 lb. (60-10) plus any additional allowed overload (usually ~4% or 9d).
- 5) The scale stores the Tare value in the current ID Code memory until cleared. Each available ID Code can store independent Tare values.

Multiple Tare Memories

MSI-9300 Series crane scales are capable of storing Tare values through the use of the ID Codes. Each ID code stores an independent Tare. ID Codes are accessible through the MSI-3750CS, MSI-9750A or MSI-9850, or through a MSI-9020 CellModem using Host Commands.

SPECIAL TARE MODES

The Tare function has two special modes. These modes are configured through the Comm Port. See the MSI-9000 CellScale User Manual for information on configuring the Tare Mode.

UNIV TAR

The Universal Tare feature allows a single Tare value to be shared by all ID Codes. With UNIV TAR enabled the individual Tares stored with each ID Code are ignored (but not erased). Disabling UNIV TAR will restore the original Tare values. UNIV TAR is intended for those applications where a common carrier or pallet is used, but multiple ID Codes are necessary for data collection.

AUTO CLR

Enabling "AUTO CLR" causes the MSI-9300 to clear the Tare Value after each lift greater than 0 NET. The Tare Value is cleared and the display mode reverts to Gross Weight once the load is removed (the weight goes below 0 NET). The "ON TOTAL" setting clears the Tare Value after the load is totaled. The default for the "AUTO CLR" function is "DISABLED". When disabled, the Tare Value can only be cleared manually (see "To Clear Tare and return to Gross Mode".)

NET/GROSS

Switches the display between Net and Gross modes. Net Weight is defined as Gross Weight minus a Tare Weight.

To Switch Between Net Mode and Gross Mode

Switching back to Gross mode from Net mode will not clear the Tare value. This allows the operator to use the Gross Mode temporarily without having to reestablish the Tare value. Only manually clearing the Tare or setting a new Tare will change the tare value held before switching into Gross Mode.

OIML Legal-for-trade units only: The NET/GROSS key is temporary action only. The Gross weight is displayed for 2 seconds and then the display returns to the Net Mode. The only way to return to permanent Gross readings is to clear the Tare (see Clear Tare procedure).

<ol style="list-style-type: none">1) Starting in the NET weight mode, push NET/GROSS. The weight mode will change to Gross weight. <i>If you are in Gross Mode and a Tare value has not been established, the Net/Gross key has no effect.</i>2) Pushing NET/GROSS again will revert the display to the NET mode.	<p>1 NET/GROSS GRS</p> <p>2 NET/GROSS NET</p>
--	---

UNITS

Allows easy weight units conversions. Although the CellScale offers up to 8 units, the MSI-9300 will only display pounds or kilograms.

This operation requires that the Test/User Key function is set to Units. See "Setup USER key Function".

To Change the UNITS

Push the TEST/USER key (programmed as UNITS). The weight display will toggle between kg and lb.	<p>1 TEST kg TEST lb</p>
---	--------------------------



TEST

Provides a functional system test, and an on-demand display check without disturbing the current weighment. The Test function can be interrupted by pushing any key during the test.

To start the Test

<p>Push the TEST/USER key (programmed as TEST). The display will do the following steps:</p> <ol style="list-style-type: none"> 1) All LEDs are illuminated for 1 second. 2) The battery condition in approximate per cent of remaining life is displayed. 3) The Network Address is displayed. <i>Numbered from 0-31</i> 4) The Network ID is displayed. <i>Numbered from 0 to 254</i> 5) The display digits count up from 0 to 9. 6) Returns to normal weight mode. 	
---	--

INTERNAL TEMPERATURE DISPLAY

The MSI-9300 can monitor its internal temperature. This feature is for use in Foundry applications or any other Crane use around high temperature sources. The temperature display can be set to display automatically at 20 second intervals (see page 15) and will display in degrees C or degrees F. The purpose of monitoring the internal temperature is to ensure that the scale is not damaged by overlong exposure to high temperatures. The MSI-9300 offers a heat shield option for foundry use that increases the dwell time possible when lifting melt pots.



MSI-9300 Series Crane Scales must be immediately removed from the high heat source when the internal temperature reaches 158°F or 70°C.

To Manually Display the MSI-9300 Internal Temperature
USER key Function set to " °F °C ". Temperature units are set in the Setup Menus.

<p>Push the TEST/USER key. The current internal temperature will display for 2 seconds.</p>	
---	--


RF LIST

When the scale is used in multiple RF Networks, the RF List function allows the user to easily switch between several networks. These networks must be setup in the embedded CellScale (See MSI-9000 User Guide).t
This operation requires that the Test/User Key function is set to RFList. See "Setup USER key Function".

MSI-9300 Porta-Weigh+ Crane Scale

SECTION 3 – MSI-9300 SETUP MENU

KEY FUNCTIONS DURING SETUP

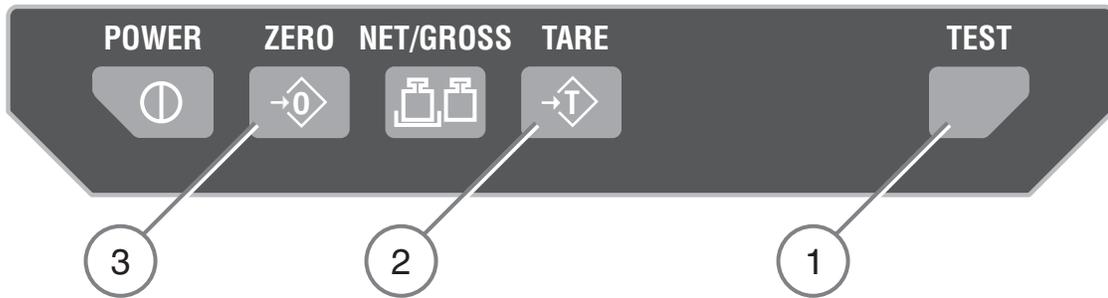


- 1) The Test key is used to scroll through menu selections.
- 2) The Tare key is used to select the displayed menu choice.
- 3) The Zero key is used to exit out of the current menu. At the root level the Zero key turns off the Setup mode and returns the MSI-9300 to weight display.

To Start the Setup Menu

<ol style="list-style-type: none"> 1) If the MSI-9300 is on, turn it off with the POWER key. 2) Press and hold the TEST key. 3) While still holding the TEST key, turn on the MSI-9300 with the POWER key. 4) Release the TEST key after the segment test screen is finished. 5) After a few seconds, the display will show the first Setup Menu item, "FUNC". 	<p>TEST hold</p> <p>POWER ⏻</p> <p>TEST release</p> <p>0.0.0.0.0.0</p> <p>Func</p>
---	--

SETUP MENU STRUCTURE

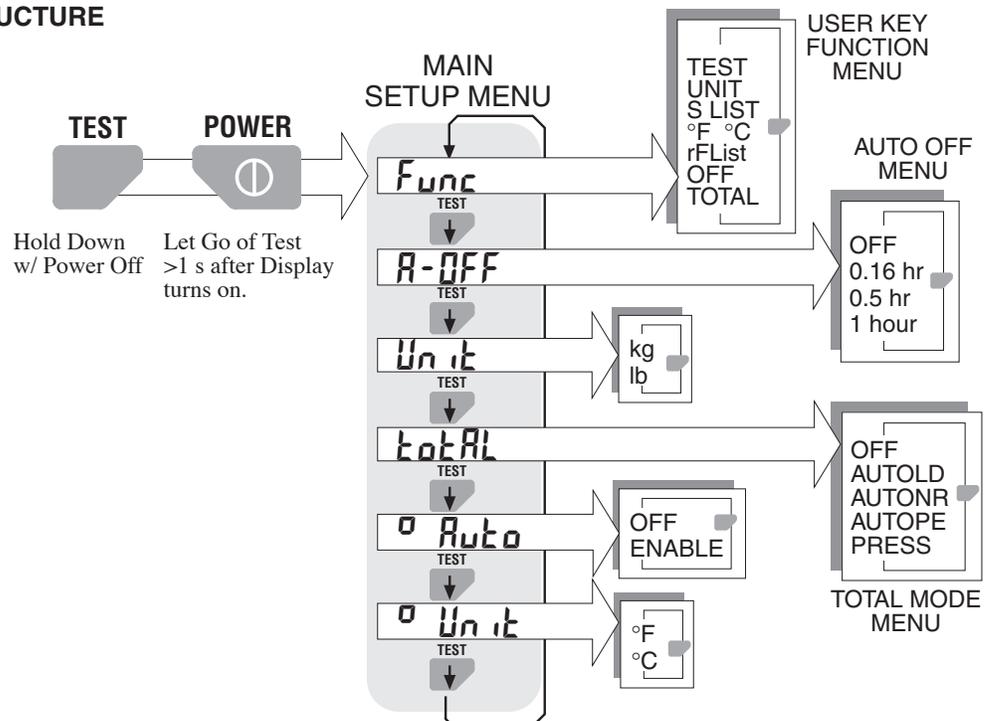



USER KEY FUNCTION

The TEST/USER key can be programmed to 1 of 6 functions:

- 1) TEST – Default function. Provides segment test of the display, battery level, and RF Network information.
- 2) UNIT – Switch between pounds (lb) and kilograms (kg).
- 3) S LIST – (Scan List) Change displayed channel to the next channel in the CellScale Scan List. Applicable to multichannel systems only.
- 4) °F °C – Displays the internal MSI-9300 temperature for 2 seconds.
- 5) OFF – No function
- 6) TOTAL – If manual total is enabled, pushing the TEST/USER key will add the current weight to the Total register. Subsequent pushes will display the totaled weight until Total is reset by returning to zero (below the total threshold, see the CellScale User Guide for more information on total threshold). If in any Auto-Total mode, the USER key functions as View Total, displaying the Total Weight for two seconds.

To Set the User Key Function

<ol style="list-style-type: none"> 1) Start the Setup Mode using the procedure on the previous page. 2) With the display reading “Func” press the TARE (Select) key. The currently programmed USER key mode will display flashing. <i>The example assumes the default function TEST is the current USER key function.</i> 3) Use the TEST (Scroll) key to scroll through the choices. <i>In this example the TEST key function will be changed to TOTAL.</i> 4) When the desired choice is shown, Press TARE (Select) to select it. <i>Pushing TARE (Select) places the displayed function as the USER key function, and exits the FUNC menu.</i> 5) The next Main Menu item, “A-OFF” will appear. Either select another Setup procedure with the TEST (Select) key, or return to weighing mode by pushing ZERO (Exit). 	<p>1 TARE (Select) → Func</p> <p>2 TEST (Scroll) → TEST</p> <p>3 TEST (Scroll) → Unit</p> <p>3 TEST (Scroll) → S LIST</p> <p>3 TEST (Scroll) → OF °C</p> <p>3 TEST (Scroll) → rFL 15t</p> <p>3 TEST (Scroll) → OFF</p> <p>3 TEST (Scroll) → Total</p> <p>4 TARE (Select) → A-OFF</p> <p>5 ZERO (Exit) to exit</p> <p>5 TEST (Scroll) to select other Main Setup Menu items.</p>
--	---

AUTOMATIC OFF

The MSI-9300 can be set to turn itself off in periods of inactivity by enabling the Automatic Off feature. The Auto Off timer is reset whenever a button is pushed or weight changes. There are 4 settings:

- 1) OFF – Feature disabled
- 2) 0.16 hr – MSI-9300 will turn off in approximately 10 minutes
- 3) 0.5 hr – MSI-9300 will turn off in ~30 minutes
- 4) 1 hour – MSI-9300 will turn off in ~1 hour.

MSI-9300 Porta-Weigh+ Crane Scale

To Setup Automatic Off

<ol style="list-style-type: none"> 1) Start the Setup Mode using the procedure on page 12. 2) Use the TEST (Scroll) key to scroll to “A-OFF”. 3) With the display reading “A-OFF” press the TARE (Select) key. The currently programmed Auto-Off setting will display flashing. <i>The example assumes the Auto-Off function was OFF.</i> 4) Use the TEST (Scroll) key to scroll through the choices. <i>In this example the Auto-Off function will be set to 1 hour.</i> 5) When the desired choice is shown, Press TARE (Select) to select it. <i>Pushing TARE (Select) places the displayed setting as the Auto-Off mode, and exits back to the Main Setup Menu.</i> 6) The next Main Menu item, “Unit” will appear. Either select another Setup procedure with the TEST (Select) key, or return to weighing mode by pushing ZERO (Exit). 	<p>1 TEST Func A-OFF</p> <p>2 TARE OFF</p> <p>3 TEST 0.16 hr</p> <p>4 TEST 0.50 hr</p> <p>4 TEST 1 hour</p> <p>4 TARE Unit</p> <p>5 ZERO to exit</p> <p>6 TEST to select other Main Setup Menu items.</p>
--	---

UNITS

The MSI-9300 will display and convert weight in pounds or kilograms. The TEST/USER key can be set to switch between lb and kg if desired. If only 1 weight unit is needed, use this procedure to set the desired unit.

To Setup the Weight Unit

<ol style="list-style-type: none"> 1) Start the Setup Mode using the procedure on page 12. 2) Use the TEST (Scroll) key to scroll to “Unit”. 3) With the display reading “Unit” press the TARE (Select) key. The currently programmed Unit setting will display flashing. 4) Use the TEST (Scroll) key to switch between kg and lb. <i>In this example the unit will be changed to kg.</i> 5) When the desired choice is shown, Press TARE (Select) to select it. <i>Pushing TARE (Select) sets the weight unit, and exits back to the Main Setup Menu.</i> 6) The next Main Menu item, “Total” will appear. Either select another Setup procedure with the TEST (Select) key, or return to weighing mode by pushing ZERO (Exit). 	<p>1 TEST Func A-OFF</p> <p>2 TEST Unit</p> <p>2 TARE Unit</p> <p>3 TEST Unit lb</p> <p>4 TARE Unit kg</p> <p>5 ZERO to exit</p> <p>6 TEST to select other Main Setup Menu items.</p>
---	---



TOTAL

The MSI-9300 CellScale feature set provides Total and Statistics capabilities. The MSI-9300 keypad allows the enabling and display of some of these features. More extensive total and statistics capability is provided when a 9750A or 3750CS meter is part of the network. However, the MSI-9300 allows the setting of the following Total features:

- 1) OFF – Total feature turned off
- 2) Autoload – The autoload feature provides an algorithm for totaling that requires a 3750CS equipped with an auxiliary push button. Intended for commodity loading into containers. See the CellScale User Guide for a complete description of the Autoload feature.
- 3) Autonorm – The Autonorm Total will automatically total all steady weights above the auto total threshold. Once totaled, the weight must return to near zero before the scale will autototal again. The autonorm total totals the last settled weight before the scale went back to zero, so be sure the weight is removed rapidly from the scale.
- 4) Autopeak – Similar to Autonorm except the weight totaled will be the highest settled weight before the weight returns to near zero.
- 5) Press – Indicates that a manual total key must be pressed to cause a total to occur. This can be the USER key programmed to total, or total keys found on the 3750CS or 9750A indicators.

To Set the Total Mode

<ol style="list-style-type: none"> 1) Start the Setup Mode using the procedure on page 12. 2) Use the TEST (Scroll) key to scroll to “Total”. 3) With the display reading “Total” press the TARE (Select) key. The currently programmed Total setting will display flashing. 4) Use the TEST (Scroll) key to scroll through the total modes. <i>In this example the mode will be changed to “AutoNorm” (AutoNr).</i> 5) When the desired choice is shown, Press TARE (Select) to select it. <i>Pushing TARE (Select) sets the Total mode, and exits back to the Main Setup Menu.</i> 6) The next Main Menu item, “° Auto” will appear. Either select another Setup procedure with the TEST (Select) key, or return to weighing mode by pushing ZERO (Exit). 	<p>1 TEST Func 2 TEST A-OFF 2 TEST Unit 2 TEST Total 3 TARE OFF 4 TEST Autold 4 TEST AutoNr 5 TARE ° Auto 6 ZERO to exit 6 TEST to select other Main Setup Menu items.</p>
---	--

MSI-9300 Porta-Weigh+ Crane Scale

AUTOMATIC TEMPERATURE DISPLAY

The MSI-9300 will display its internal temperature once every 20 seconds if enabled with the following procedure.

To Enable Auto Temp Display (° Auto) & Set Temperature Units

<ol style="list-style-type: none"> 1) Start the Setup Mode using the procedure on page 12. 2) Use the TEST (Scroll) key to scroll to “° Auto”. 3) With the display reading “° Auto” press the TARE (Select) key. The currently programmed Auto-Temperature setting will display flashing. 4) Use the TEST (Scroll) key to Enable the Auto-Temperature mode. 5) When the desired choice is shown, Press TARE (Select) to select it. <i>Pushing TARE (Select) sets the Auto-Temp mode either OFF or Enable, and exits back to the Main Setup Menu.</i> 6) The next Main Menu item, “° Unit” will appear. Push TARE (Select) to setup the desired temperature unit (°F or °C). 7) Use the TEST (Scroll) key to select °C or °F. 8) Push TARE (Select) to set the temperature unit. 9) The next Main Menu item, “Func” will appear. Either select another Setup procedure with the TEST (Select) key, or return to weighing mode by pushing ZERO (Exit). 	<p>The diagram illustrates the sequence of key presses and corresponding display changes:</p> <ul style="list-style-type: none"> 1. Press TEST (Scroll) key: Display shows "Func". 2. Press TEST (Scroll) key: Display shows "A-OFF". 2. Press TEST (Scroll) key: Display shows "Unit". 2. Press TEST (Scroll) key: Display shows "toAL". 2. Press TEST (Scroll) key: Display shows "° Auto". 2. Press TARE (Select) key: Display shows "OFF". 3. Press TEST (Scroll) key: Display shows "EnABLE". 4. Press TARE (Select) key: Display shows "° Unit". 5. Press TARE (Select) key: Display shows "°F". 6. Press TEST (Scroll) key: Display shows "°C". 7. Press TARE (Select) key: Display shows "Func". 8. Press ZERO (Exit) key: Display shows "Func" and the instruction "to exit". 9. Press TEST (Select) key: Display shows "Func" and the instruction "to select other Main Setup Menu items."
---	---

RF LIST SCROLLING


The internal RF modem can be preconfigured with up to 8 RF Network assignments. This allows the scale to move from network to network without having to hook up a computer to change the network assignments. The RF List must be originally configured in the embedded CellScale using the Terminal Access Mode. Once the RF List is programmed, the user can change networks with the following procedure.

<ol style="list-style-type: none"> 1) Program the USER key to “rFLiSt” using the procedure on page 12. 2) Press the TEST/USER key to display the current network setting. The first two digits are the Network, the second 3 digits are the new “My ID”. 3) Press the TEST key to scroll through the Network choices. Up to 8 networks can be configured. <i>To exit without changing the Network Settings, press the ZERO key at any time.</i> 4) When the desired Network setting is shown, press TARE 	<p>The diagram illustrates the sequence of key presses and corresponding display changes:</p> <ul style="list-style-type: none"> 1. Press TEST (Scroll) key: Display shows "Func". 2. Press TEST (Scroll) key: Display shows "1- 21". 3. Press TEST (Scroll) key: Display shows "2- 21". 3. Press TEST (Scroll) key: Display shows "12- 56". 3. Press TEST (Scroll) key: Display shows "14-232".
--	---

(Select) to select it.

Pushing TARE (Select) reconfigures the Modem to new network settings.

- 5) The display will go into test mode while the network settings are being altered. When the modem is successfully changed, the display will return to the weight mode.

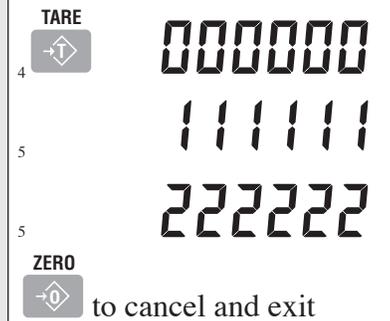

To Change Current RF Network

This feature is intended for use in large installations where, for service or work load purposes, the crane scale must be used on a new network. When the crane scale is a remote (slave) device, the Master CellScale must be configured with a matching channel 5 scanlist to allow seamless Network migration. In other words, the “MY ID” must be identical to the unit it is replacing. Make sure two remote devices with the same “My ID” are never on at the same time in the same Network.

When the crane scale is a Host (Master) device, only the network number can be changed, the master “My ID” will not change. All remote devices on the previous network will lose communication.

MSI-9300 Porta-Weigh+ Crane Scale

SECTION 4 – RF REMOTE CONTROL

DESCRIPTION

MSI-9300 Series crane scales can be equipped with an RF Remote Control (RFRC). This differs from using the MSI-9750A or MSI-3750CS Indicators to control the scale. The RFRC is a transmit only device that can be used to perform basic scale functions. It does not have the range of the Spread Spectrum modems built into the RF versions of MSI-9300 Series crane scales and is intended for local control only. Range will vary from 25' to 100' depending on room conditions and line of sight to the display. The remote receiving antenna is behind the red lens of the crane scale and best range will occur when the display is visible to the operator using the RFRC. One big advantage the RFRC provides is the ability to turn the unit on remotely. The RFRC can also be used in systems that do not have the RF Modem.

The RFRC is available in three versions differing only in transmit frequency. The standard version operates at 418MHz. Available alternative frequencies are 315MHz and 433MHz.

FUNCTIONS

The RF Remote control duplicates the functions of the front panel keys on MSI-9300 Series crane scales. The POWER, ZERO, NET/GROSS, and TARE key function identically. In addition, the RFRC adds direct control of TOTAL and VIEW TOTAL without the use of the USER key. The TOTAL still needs to be enabled and configured in the embedded CellScale before these features will function properly. See page 14 for the procedure to set up the Total mode.

The F1 key functions the same as the TEST/USER key on the front panel. The exact function of this key depends on the USER key setup procedure. See page 12 for the procedure to configure the USER key which will also configure the F1 key on the remote. Since the RFRC has a dedicated key for Total, there is no need to program the USER key to Total, and it can be used for other purposes.

The F2 key is programmed to trigger a remote print. When F2 is pressed, the crane scale will transmit the data string programmed in the virtual Comm Port 3 of the embedded CellScale. This data string can be used in a variety of ways. For example, a remote printer can be connected to the MSI-9020 CellModem. When F2 is pressed, the remote printer could print the weight along with time, date, total weight, or any other data parameter available from the embedded CellScale. Another common use is to send the weight data to a computer configured to data log the information to a database.

For information on Data Strings and the use of Virtual CommPort 3, refer to the MSI-9000 CellScale Users Guide. F3 and F4 are not supported by MSI-9300 Series crane scales. These keys function as TOTAL and VIEW TOTAL (Σ).




SETTING THE TRANSMITTER ADDRESS

In order to allow the formation of up to 1024 unique Transmitter-Receiver relationships, the transmitter's address may be selected using internal DIP switches as shown. The switches are accessed by removing the DIP-switch access cover.

If the switch is on, the address line is connected to ground, otherwise it is floating. The receiver's address must match in order for the units to communicate.

MSI supplies the transmitter and receiver as a matched set with the DIP switches already configured. A replacement RFRC will only need to have the transmitter DIP switch set. To change the DIP switch in the receiver requires disassembly of the crane scale front casting.

Due to differing DIP switch styles, the receiver DIP switch appears opposite to that of the transmitter. On the receiver, the OFF position is on the right, and the ON position is on the left.

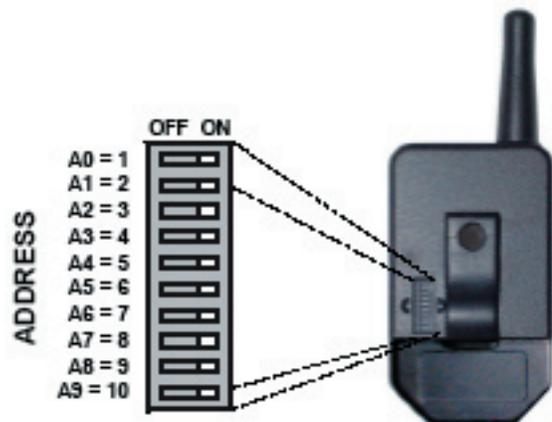

CONTENTION CONSIDERATIONS

It is important to understand that only one transmitter at a time can be activated within a reception area. While the transmitted signal consists of encoded digital data, only one carrier of any frequency can occupy airspace without contention at any given time.

BATTERY REPLACEMENT

The remote unit utilizes a CR-2032 Button Lithium Cell. In normal use it will provide 1-2 years of operation. Access for replacement is accomplished by removing the battery access cover by pressing down firmly on the label area and sliding it off. Once the unit is open, remove the battery by sliding it from beneath the holder. Replace the cell with the same type while observing the polarity shown.



RF REMOTE CONTROL FCC STATEMENT

INSTRUCTION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This equipment has been certified to comply with the limits for a Class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment

MSI-9300 Porta-Weigh+ Crane Scale

SECTION 4 – THE EMBEDDED CELLSCALE

For a complete guide to all the features of the embedded CellScale, refer to the MSI-9000 User Guide.

ACCESSING THE CELLSCALE

MSI-9300 Series crane scales are a shell interface to an embedded CellScale. To access the advanced features of the CellScale, a Comm Port is provided on the front casting of the crane scale. This Comm Port is only used for interfacing to the embedded CellScale and cannot be used as an output of any kind.

The CellScale offers Set Points, ID Codes, and other advanced features which are controlled either through a remote Indicators such as the MSI-3750CS, the MSI-9850, or the MSI-9750A Handheld. These features are also accessed by connecting a terminal program in a PC to the Comm Port. Tested terminal programs that function well with the CellScale include ProComm Plus, Qmodem, HyperTerm (shipped with many versions of Windows), WinTerm, and ZTerm (for Macintosh). Usually a VT102 emulation is used. All commands are single key except when entering data.

Settings for your terminal program are: 9600 baud, 8 bit, 1 start bit, 1 stop bit, no parity, Handshaking usually not required, but you can turn on Xon/Xoff if you desire.

While the Comm Port is in use, the display of the MSI-9300 Series crane scale is in standby with the message “C-Port” or “H-Port” displayed. The only key that will function in this mode is the Power key.

The CellScale Terminal Access Mode is used to set Network parameters, Scale parameters, Set Points, and other various setup conditions. Refer to the MSI-9000 CellScale User Guide for detailed information. The Terminal Access Mode is used for calibration on MSI-9300 Series crane scales that do not have the RF modem.

CONNECTION PROCEDURE

The MSI-9300 must be on and finished with its startup sequence before connecting the terminal cable to a PC.

- 1) Without connecting the PC or Terminal to the MSI-9300, turn the MSI-9300 on. Wait for the startup sequence to complete (usually about 10-15 seconds). When weight is displayed, the MSI-9300 is ready.
- 2) Press and Hold the **NET/GROSS** key and then push **TEST**. The display should change to “H-PORT”.
- 3) Connect the PC to the MSI-9300 through the Comm Port. Start your terminal emulation program with settings 9600-N-8-1
- 4) You can now access the Terminal menus in the CellScale. Push any key to refresh the menu.
- 5) Once in the Terminal Access Mode menus, commands are usually a single number or letter. Refer to the 9000 CellScale User Guide for further information.

COMM PORT CABLE

The MSI-9300 comes standard with one Comm port cable wired for RS-232 (MSI P/N 501705-0001) following the AT standard for 9 pin serial cables (DCE). An unterminated cable is available (MSI P/N 12023) if you wish to wire your own serial cable for RS-232.

Comm Port Cable Color Code RS-232

Brown – Transmit output from CellScale, connect to receive of DTE.


Black – Receive input to CellScale, connect to transmit of DTE.

Grey – CTS Input to CellScale. Connect to RTS or RTR output of DTE.

White – RTS/RTR output from CellScale. Connect to CTS input of DTE.

Blue – Signal Ground

Drain Wire – Connect to metal shell.

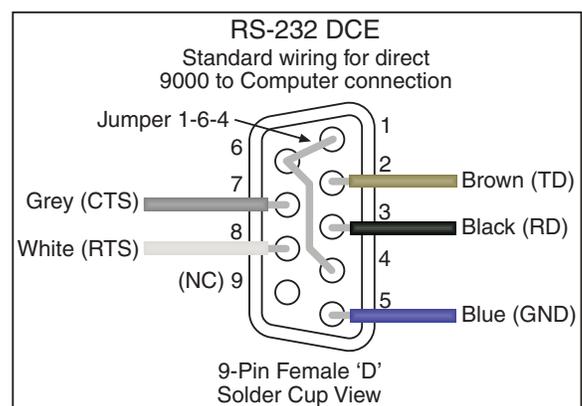

SET POINTS

The Internal CellScale can monitor up to 32 Set Points. Set Points are used for safety warnings and process control. The MSI-9300 has LED annunciators for Set Points 1 through 3. Set Points are programmed from a 3750CS, a 9750A, or through the Terminal Access Mode. On special order MSI can supply audible alarms, sirens, or other warning devices for Set Point outputs.

PASSWORD PROTECTION

The calibration and setup features in the MSI-9300 Series crane scales can be protected from tampering through the use of passwords. Passwords can be up to 20 characters long. Be sure to record your password(s). The default password is just a return. You can lock features without passwords to prevent accidental feature changes. Password protection of calibration is not required for LFT scales as they are protected with a seal switch.

Main CellScale Menu → (4) Feature Locks / Passwords

```

**** Feature Locks/Passwords Setup ****

(1) Calibration
(2) Channel menu
(3) Communications
(4) NTEP
(5) Product ID menu
(6) Radio menu
(7) Set Points menu
(8) Strings menu
(9) Individual Features
(ESC) Exit

```

Main CellScale Menu → (4) Feature Locks / Passwords → (1) Calibration

```

**** Calibration Lock ****

(1) Calibration password is:      None
(2) Calibration is:              Un-Locked
(ESC) Exit

```

This menu is typical of all the lock menus. You can assign a separate password to any major feature. To lock a feature or menu, press 2 change from “Un-locked” to “Locked”. When a feature is locked, entering into the menu will require the password before proceeding. To lock all channel related setups, MSI recommends locking the Channel menu (choice 2). This prevents tampering of calibration and all parameters related to scale performance.

SCALE CALIBRATION

MSI-9300 Series crane scales are best calibrated using a remote indicator such as the MSI-3750CS, MSI-9850, or the MSI-9750A Handheld. Calibration procedures using these devices are covered in their respective User Guides. If the crane scale is not RF equipped, the only way to calibrate it is through the Comm Port using the Terminal Access Mode.

MSI recommends having test weights of at least 50% capacity to properly calibrate the Crane Scale. The calibration procedures will operate with as little as 12.5% of capacity, though rated accuracy cannot be guaranteed. Very large capacity scales are often calibrated using transfer techniques. Weigh something on a truck scale, then pick it up on the Crane scale and match the weight during the calibration procedure. The CellScale software permits multi-point calibration (up to 9 span points + Zero). MSI Crane Scales are very linear from zero to capacity, and therefore, usually do not require Multi-Point calibration. The need for Multi-Point calibration is left up to the Scale Technician.

Legal-for-Trade Units

To calibrate LFT units, you must first press the pushbutton found behind the seal screw on the front panel (see figure 4-1). Sealing instructions are found on page 29.

Calibration Tips

- 1) Make sure that the scale and load are stable (not swinging or vibrating) for every calibration step.
- 2) Prevent off-center loading during calibration. The scale must be perpendicular to the earth to prevent

MSI-9300 Porta-Weigh+ Crane Scale

cosine theta errors. Adjust the rigging as necessary so that the pull is straight through the center of the scale.

- 3) Calibration always starts with the zero load. Remove all rigging that is not always present on the scale. However, it is sometimes best to calibrate zero with the rigging necessary for picking up the test weights attached to the scale. It's effect on dead load can be zeroed out later.
- 4) If rigging has not been zeroed out, make sure you add its weight to the test weight when entering the calibration weight.
- 5) Multi-point calibration can be done in any random order, as long as the zero step is first.

CALIBRATION PROCEDURE

The following procedure assumes the scale can be unloaded to perform a zero reading.

- 1) Connect a terminal (or computer with a terminal program) to the crane scale's Comm port. Settings for your terminal program are: 9600 baud, 8 bit, 1 start bit, 1 stop bit, no parity, Handshaking is usually not required, but you can turn on Xon/Xoff if you desire.
- 2) The crane scale display should read "C-Port". If not proceed anyway. Step 3 will reconfigure the Comm Port.
- 3) Press and Hold NET/GROSS then press USER. The LED should read "H-Port". Press [RETURN] on your terminal program. The CellScale main menu should appear.

```
----- MSI 9000 - CellScale -----  
- (c) 2005 Measurement Systems International -  
-----  
  
13:48:06                               10/02/05  
  
(1) Channels/Calibration  
(2) Communications  
(3) Display  
(4) Feature Locks/Passwords  
(5) Product IDs  
(6) Set Points  
(7) System  
(8) About...  
  
Enter choice :
```

- 4) Select "Channels / Calibration" by pressing the terminal's [1] key. The Channel Setup menu appears or a dialog box asks you to press the sealed calibration keys (Standard set for NTEP or OIML mode).

```
***** Channel Setup *****  
  
(1) Channel Calibration  
(2) Data backup  
(3) Filter (software)  
(4) Channel Scanlist functions  
(5) Motion Compensation (Accelerometer option required)  
(6) Motion Detection  
(7) Tare  
(8) Total  
(9) Units Lock  
(a) Zero  
(b) Standard Mode: Industry  
(c) 4 to 20mA  
(ESC) Exit
```

- 5) Start the Calibration procedure by pressing [1]. The "Choose Channel to Calibrate" menu appears. This menu allows you to select which channel is to be calibrated. It uses the Scan List to identify which channels are available for calibration.

For multiple channel systems, the channel list must be set up before starting the calibration procedure. See Section 4 in the MSI-9000 CellScale User Guide.



```

***** Choose Channel Parameters *****

(1)   Continue. These settings are correct
(2)   Choose the channel to calibrate:      1-1
(3)   Calibration timeout:                  10 minutes
(ESC) Exit
    
```

- 6) If the desired channel is already displayed, press [1] to continue to the next step. The channel number is changed by pressing [2] until the desired channel to calibrate is displayed. This is typically 1-1 on MSI-9300 Series crane scales. Dual load cell systems might have a channel 2-1 for the second load cell. Once the correct channel is shown, press [1] "Continue ...".

NOTE: Channel default is the first active channel. In this case, 1-1. It is also recommended to change the calibration timeout to NONE, by pressing [3], until menu item 3 indicates: NONE.

- 7) The Channel Calibration menu appears. If the CellScale channel has never been calibrated, then you must select [1]. If this is a recalibration for the same capacity, count-by (d) and calibration units, then you can skip to step 10 by pressing [2]. Press [2] only if the settings at the bottom of the screen match the capacity and resolution requirements.

```

***** Channel Calibration *****

(1)   Perform a completely new calibration
(2)   Re-do the current calibration
(3)   Manually adjust current cal points
(4)   Reset all cal parameters to defaults
(ESC) Exit

Calibrate channel #:          1-1
The channel name is:         Fred2.....
Calibration Capacity:        1000.0
Calibration Countyby:       0.2
Calibration Units:           Pounds
    
```

- 8) The CellScale prompts for the calibration unit. Chose the desired unit. In this example we will choose kilograms (2). MSI-9300 Series crane scales only have annunciators for pounds and kilograms.

Your choice of calibration unit does not prevent you from displaying the weight in any other unit. Select the unit matching your test weights.

```

***** Choose Calibration Units *****

(1)   Pounds
(2)   Kilograms
(3)   Tons
(4)   Metric Tons
(5)   Ounces
(6)   Grams
(7)   Deka-Newtons

Type a key...
    
```

- 9) The CellScale next prompts for the capacity. With the numeric keys, enter the capacity of the scale. In our example we'll enter 10,000 kg.

The capacity represents the highest operating value of the crane scale. Do not enter a higher number than the scale is rated for. The actual overload point is a few scale divisions above the entered capacity depending on the legal-for-trade settings.

```

Type in the new capacity:      kg
    
```

- 10) The CellScale next prompts for the count by (d). The list presented is calculated by the processor according to the type of transducer as set up in the channel list. In this example we'll select [b] to provide 5000 counts.

This list is for a type 'A' scale with up to 10000 counts resolution. This is the standard default. MSI recommends all MSI-9300 Series crane scales calibrated at 5000 divisions or less. Too many divisions will compromise stability and settling time. Use the largest division size suitable for your application.

MSI-9300 Porta-Weigh+ Crane Scale

***** Select a countby *****

- (a) 1. Kilograms
- (b) 2. Kilograms
- (c) 5. Kilograms
- (d) 10. Kilograms
- (e) 20. Kilograms
- (f) 50. Kilograms
- (g) 100. Kilograms

- 11) The first actual calibration step is zero. Unload the scale, make sure it is stable, and press Y. The scale performs its zeroing step, removing all dead load. This process takes up to 4 seconds.

***** Channel Calibration *****

Calibrating Ch # 1-1, named: Test2.....
Precision in Kilograms : 10000. x 2.

Test weight # 0 in Kilograms : 0.

Unload the scale.
Press (Y) when scale is unloaded and steady
Press (B) to backup
Press (ESC) to exit calibration

Raw A/D counts: 1900709

The number presented at the bottom of the screen is direct A/D counts. This is for troubleshooting only. This number will never be steady as it represents 24 bits. If the deviation is less than ± 750 counts the load is stable enough for a 5000 count scale. The calibration step needs the scale platform to remain steady and unloaded during this step.

- 12) Next, the CellScale prompts for the value of the first test weight. This step defaults to capacity. If this is what you want push 'Y' otherwise push 'N' to input the actual cal weight. In our example, we will use a 5000 kg test weight first.

***** Channel Calibration *****

Calibrating Ch # 1-1, named: Test2.....
Precision in Kilograms : 10000. x 2.

Test weight # 0 in Kilograms : 0.

Test weight # 1 in Kilograms : 10000.
Press (Y) if this is correct
Press (N) to change
Press (B) to backup
Press (ESC) to exit calibration

It does not matter if you cal from high to low, or low to high, or any order at all. The CellScale calibration routine works in any order.

- 13) Press [n]. Type in the test weight value and enter it using the return key. In this example we will use 5000 kg as the first test weight.

Type in the new test weight value: 5000 Kilograms



```

***** Channel Calibration *****

Calibrating Ch # 1-1, named:   Fred2.....
Precision in Kilograms   :      10000. x 2.

Test weight #  0 in Kilograms :      0.
Test weight #  1 in Kilograms :     5000.

Load the scale with test weight #  1
Press (Y)      when scale is loaded and steady
Press (B)      to backup
Press (ESC)    to exit calibration

Raw A/D counts: 1675807
    
```

- 14) Load the scale platform with the indicated test weight (5000 kg for our example). When the scale is stable push 'Y'.
- 15) The CellScale calibrates with the first test weight, and then presents the following menu. The upper half of the screen indicates the two cal steps taken so far, zero and a 5000 kg test weight. If this two point calibration is adequate for the application (in most well designed scale systems, it is), the ESC key can be pressed to end calibration, and store all the calibration constants. However if additional test weights are applied, repeat steps 11 and 12 until finished. Up to 9 span points can be calibrated. Any time it is deemed that enough points have been entered, pushing the ESC key will end the calibration and store the constants in calibration memory.

```

***** Channel Calibration *****

Calibrating Ch # 1-1, named:   Fred2.....
Precision in Kilograms   :      10000. x 2.

Test weight #  0 in Kilograms :      0.
Test weight #  1 in Kilograms :     5000.

Test weight #  2 in Kilograms :     2001.
Press (Y)      if this is correct
Press (N)      to change
Press (B)      to backup
Press (ESC)    to complete and store calibration
    
```

For clarity we'll add a second cal' point at 2000 kg in this example calibration. Load the scale with the 2000 kg weight. If the display shows the exact right number, this cal point is not needed. In our example, the display showed 2001 (a 1/2 'd' error). We can pull this in with a second point calibration, even though this error probably would not show in a system with a 2kg 'd'.

- 16) Type [n] to bring up the weight entry screen. Type in the correct value for the 2nd test weight. Push return to enter the value.

```

Type in the new test weight value:   2000   Kilograms
    
```

MSI-9300 Porta-Weigh+ Crane Scale

```
***** Channel Calibration *****

Calibrating Ch # 1-1, named:   Fred2.....
Precision in Kilograms   :      10000. x 2.

Test weight #  0 in Kilograms :      0.
Test weight #  1 in Kilograms :     5000.
Test weight #  2 in Kilograms :     2000.

Load the scale with test weight #  2
Press (Y)   when scale is loaded and steady
Press (B)   to backup
Press (ESC) to complete and store calibration

Raw A/D counts: 4528050
```

17) Ensure the 2nd test weight is on the scale and steady. When it is, press [Y].

```
***** Channel Calibration *****

Calibrating Ch # 1-1, named:   Fred2.....
Precision in Kilograms   :      10000. x 2.

Test weight #  0 in Kilograms :      0.
Test weight #  1 in Kilograms :     2000.
Test weight #  2 in Kilograms :     5000.

Test weight #  3 in Kilograms :     2000.
Press (Y)   if this is correct
Press (N)   to change
Press (B)   to backup
Press (ESC) to complete and store calibration
```

18) After the second span point calibration, the CellScale rearranges the test weights in ascending order. The following menu appears for cal point 3. This is the end of our example calibration. Push [ESC] to end cal, store constants, and return to the main menu. If more span points are desired, repeat steps 16 and 17 up to a maximum of 9 span points.

CELLSCALE SETTINGS FOR MSI-9300

Certain Terminal Access Settings are required for compatibility with the MSI-9300 display board. These settings should not be changed. The default settings should be:

MAIN > SYSTEM > POWER: Set to AC (Display board checks battery, do not set to 12V SLA).

MAIN > SYSTEM > LEDs: Turn all off and turn Power to Low. (LEDs can't be seen anyway, saves power to turn them off).

Do not modify Comm Port 1 baud rate settings. This could interfere with communications with the display board.

RF SYSTEM SETUP

MSI-9300 Series crane scales use an embedded CellScale to communicate through an advanced 2.4GHz Spread Spectrum modem. Details of the RF Network setup is covered in the MSI-9000 CellScale User Guide.

LEGAL STANDARD

The MSI-9300 Series scales must be configured properly for use in Legal -for-Trade transactions. For most industrial applications, LFT settings are not required. The Industrial and Metric settings have the same accuracy performance as the NTEP and OIML settings. Unless you are required by law to use the scale in LFT

mode, leave the system in Industry or Metric modes.

Descriptions of standard modes:

[1] Industry – All functions and units are available. This is the default mode of the scale.

[2] NTEP – Choosing NTEP has the following effect: 1) The sealed switch must be pressed to modify any metrologically significant setting. 2) Multiple remote RF display devices are allowed, but only one device is allowed to zero, tare, or any other control function. This device is determined in the Communications Menu (page 28). See “Sealing the MSI-9000” on the following page for details on sealing the settings and calibrations.

[3] OIML – R76 sealed mode. Features not allowed by OIML R76 testing are locked out. R76 feature set is TBD. This setting is not yet operational.

[4] Metric – All features are enabled, except only Metric units are available (g, kg, Metric Tons).

SETTING THE LEGAL STANDARD MODE

1) From the Channels/Calibration Menu, push [b].

```

***** Channel Setup *****
(1) Channel Calibration
(2) Data backup
(3) Filter (software)
(4) Channel Scanlist functions
(5) Motion Compensation (Accelerometer option required)
(6) Motion Detection
(7) Tare
(8) Total
(9) Units Lock
(a) Zero
(b) Standard Mode: Industry
(c) 4 to 20mA
(ESC) Exit

```

```

***** Scale Standard Setup *****
(1) Industry
(2) NTEP
(3) OIML
(4) Metric (g, kg, metric tons)
(ESC) Exit

```

2) Select the desired scale standard.

3) Selecting NTEP or OIML for the first time will bring up the following screen:

```

***** Notice *****
* You must push the sealed *
* calibration switch on the*
* CellScale to continue. *
*       Push now or       *
*                         *
*                         *
* (ESC) to exit          *
*****

```

Remove the seal screw (see figure 4-1). Using a non-metallic tool, gently press the pushbutton located behind the hole. This enables menu access and calibration of all the metrologically significant parameters. Pressing the button stays in effect until the power is cycled.

MSI-9300 Porta-Weigh+ Crane Scale

LEGAL-FOR-TRADE CONTROL DEVICE

When the MSI-9300 is configured for NTEP or OIML Legal-For-Trade (LFT) only one remote device is allowed to have control over the CellScale. The control device is the only RF connected device that can zero, tare, calibrate, and any other controls that are considered metrologically significant. This control can be assigned to a 3750CS Remote Display, a 9750A Handheld Display, or to a 9020 CellModem connected to a computer using the MSI Host commands. 9850 Indicator approval is pending.

Additional RF connected devices are allowed, but they can only function as displays with no controls. Thus you can assign, for example, a 9750A as the control device, but you can still operate a scoreboard display connected to a CellModem (MSI-9020). Additional 9750A's can monitor the weight, but they would not be able to zero or tare the weight, or change the weight mode.

The assigned Control Device RF ID must be known before entering this menu. The number needed is referred to as "My ID" in a 3750CS, or "My address" in the 9750A. These can be read from the Modem settings in each device. Of course, the main Network numbers must match between the MSI-9300 and the assigned LFT control device.

Main CellScale Menu → (2) Communications → (9) Assigned Legal-For-Trade Control Device

```
***** Assign Device for Access Right in legal for trade mode *****

Type in Device ID for Access Right range (0=Host to 254):
(ESC)  Exit
```

- 1) From the main CellScale Menu, press [2] Communications, then [9] Assigned Legal-For-Trade Control Device.
- 2) Use the numeric keys on your terminal to enter the address of the control device. Legal addresses range from 04 to 251. Use only the "My ID" or "My Address" portion of the designated control device.
- 3) Press **ENTER** to store the control device address. Press **ESC** to abort the reassignment of the control device.
- 4) Confirm the correct control address has been assigned.
- 5) Press **ESC** one or more times to return to other menus.

This menu does not effect non LFT standard settings – Industrial, or Metric.

SEALING MSI-9300 CRANE SCALES

The 9300 Series Crane Scales are sealed with a standard lead-wire seal. The seal is used to prevent removal of the seal screw covering the calibration enable switch. The wire is passed through the seal screw and through an adjacent casting bolt. Use seal wire with a maximum diameter of .040" (1mm). 20 Gauge or smaller wire is appropriate.

Once all channel parameters are set and calibrations completed replace the seal screw and tighten down securely to ensure a water proof seal.

Sealing display/indicator devices (9750A, 9850 and 3750CS) is not required because all metrologically significant features are stored in the 9300 device. The 3750CS does offer a sealing method to prevent calibration tampering in industrial settings. However use of the 3750CS for calibration still requires pressing the calibration enable switch on the 9300 when it is set into LFT modes. The 9750A offers password protection modes to prevent calibration tampering, but again, in LFT modes the calibration enable switch on the 9300 will have to be pressed, requiring breaking the seal at the 9300 Series Crane Scale.

The Power must be cycled after a calibration of a LFT scale in order to reset the sealed Calibration switch.

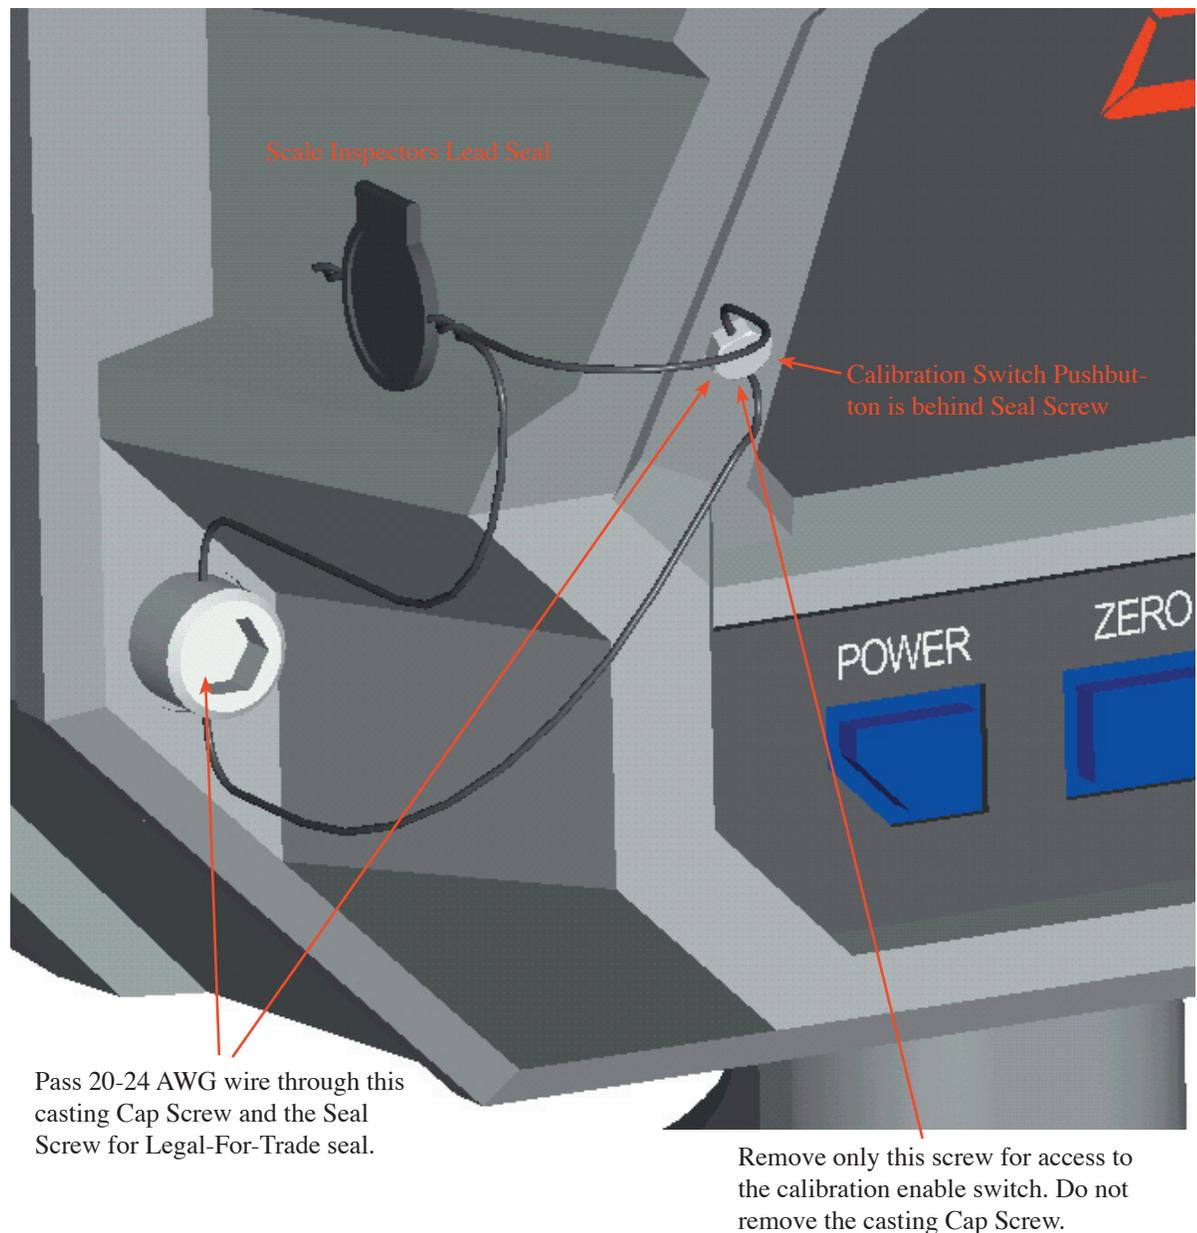


Figure 4-1



APPENDIX – SPECIFICATIONS & DIMENSIONS

HARDWARE OVERVIEW

Electronics

- μ C Board: 6 layer SMD, AM186ESLV based w/ Flash Memory – 512kbytes of Flash Program Memory, 512kbytes of non-volatile RAM.
- Power Supply / I/O Board: power regulation and I/O for MM – Input range 10-16V. Optional direct AC board 90-260VAC.
- 2 Channel A/D Board: 4 layer SMD, 24bit A/D.
- Highly integrated Radio Modem: 2.4GHz Spread Spectrum. Protected Antenna.
- Display Board: 4 Layer SMD with six 1.2" (30mm) digits and 14 backlit annunciators.

Housing

- Alodined Cast Aluminum. Double O-ring gasketed. NEMA 4, IP66

Load Train

- Load Cell: 4340 Aircraft Quality Steel
- Industry Standard Lifting Eyes and Bottom Hooks

GENERAL FEATURES

Channels 1-4 – Scale Input Channels

- Internal Load Cell connected to Channel 1. Optional additional scale inputs by special order for multipoint lift situations.

Channel 5

- Channel 5 allows remote access to inputs on remote Slave CellScales

Channel 6

- Channel 6 is math calculations. Up to 8 separate math channels can be used to combine conversions from multiple scale channels. Supported functions are: multiply, divide, add, subtract, absolute value, square root, and constants. Multiple levels of parentheses are available for any scaling or channel data manipulation formulas.

Excitation

- 5 V (+5V relative to ground). Current limited and over-voltage protected to Factory Mutual standards. AC (switched DC) or DC excitation.

Radio Link

- Frequency Hopping Spread Spectrum in 64 channels @ 2.4 GHz. Allows 64 collocated networks of scales and peripheral devices (MSI Models MSI-9020, MSI-9750A, MSI-9850, MSI-3750CS, etc.).

Calibration

- Via RF or Input Comm Port. Calibration is accomplished through a computer program residing on any computer. The calibration program is user friendly, with menus that are easy to use on a full graphics screen. Calibration is also available using the MSI-3750CS, MSI-9850 or MSI-9750A Meters. Seal can be provided on front panel in Legal-For-Trade systems.

MSI-9300 Porta-Weigh+ Crane Scale

GENERAL SPECIFICATIONS

Calibration Parameters (Programmed via Terminal Access Mode)

- CAL – Zero then Span, up to 10 point calibration (counting 0)
- AZM – OFF, ON (.5d), 1d to 255d Programmable
- Motion Detect – OFF, ON (.5d), 1d to 255d (programmable in 1d steps)
- Software Filter – None, LOW, HIGH
- Zero – 100% of capacity, limited by Legal-for-trade settings.
- Units – lb, kg on MSI-9300 display. Ton, Ton (metric), oz, g, daN, or user defined using the math channels through remote indicators (3750CS or 9750A).
- Standard Crane Scale Capacities – 500 lb / 250 kg, 2000 lb / 1000 kg, 5000 lb / 2500 kg, 10000 lb / 5000 kg, 20000 lb / 10000 kg, 30000 lb / 15000 kg, 50000 lb / 25000 kg, 70000 lb / 35000kg, 100000 lb / 50000kg. Larger capacities available on request. MSI can provide load cells to 500 tons. Any scale can be calibrated to a smaller capacity. e.g. a 2000 lb scale could be calibrated to overload at 1800 lb.
- “d” Scale divisions – Any resolution from 10,000 divisions or less. Standard MSI-9300 resolution is 2000d to 5000d. Having more resolution than needed can cause settling delay.

Power Consumption

- Battery Life – 20-30 Hrs depending on brightness and average number of segments on. Without RF Modem 40-60 Hrs.

Approvals (pending)

- NTEP, OIML, Factory Mutual, NEMA, FCC

Temperature

- Operating NTEP/OIML
-40°C to 85°C (-40° to 185° F) -10°C to 40°C (14° to 104° F)

RFI/EMI Shielding

- Exceeds NIST HB44 and European Standards.

Real Time Clock

- Supports date/time stamping in US or European time and date. Backed up by a replaceable Lithium Battery (Typical life >5 years). Clock data available via RF interfaces (3750CS, 9750A, 9020).

Data I/O

- Any scale data is available via RF Modem or through the 3750CS or 9750A Indicators.

Totalization and Statistics


- Push button or Automatic. Total weight up to 999,999,999. Weighments counter up to 65,535. Totals are stored with each ID register. Min, Max, Average, Standard Deviation, and Coefficient of Variance computed and stored for each ID.

Internal Set Points

- 3 Contacts internal (SS Relays). Programmable for form A or form B (normally open or normally closed). Relays rated for 60V @ 350mA. 2.5Ω maximum contact resistance. Accessible by special order.




DIMENSIONS AND LOAD TRAIN SPECIFICATIONS, STANDARD MSI-9300

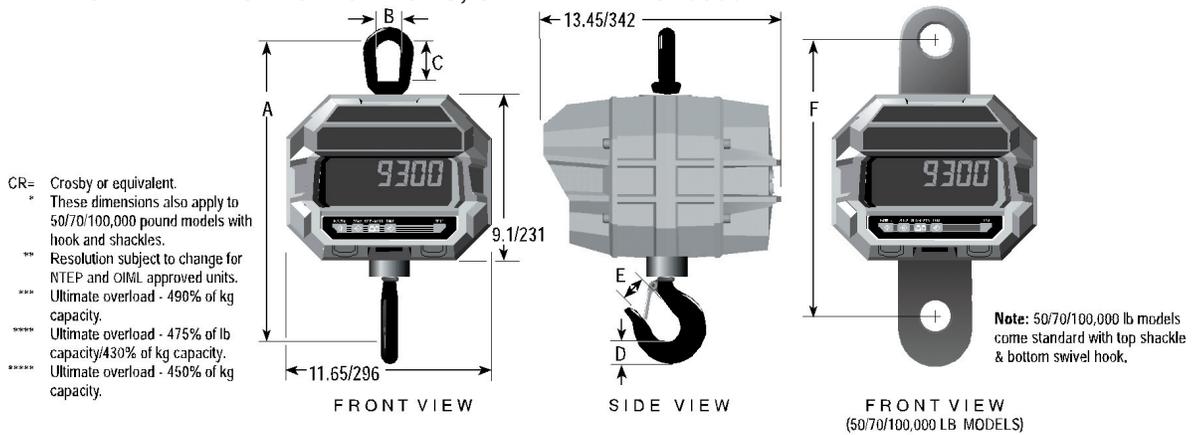

DIMENSIONS AND SPECIFICATIONS

CAPACITY	RESOLUTION**	A*	B*	C*	D*	E*	F	HOOK	EYE NUT OR SHACKLE	APPROX. SHIP WT.
500 lb	0.2 lb	18.3 in	2.25	3.06	1.44	1.34	-	3 ton	CR #7	53 lb
250 kg	0.1 kg	465 mm	57.1	77.7	37.0	34.0	-	Swivel	Eye Nut	24 kg
2,000 lb	1 lb	18.3 in	2.25	3.06	1.44	1.34	-	3 ton	CR #7	53 lb
1,000 kg	0.5 kg	465 mm	57.1	77.7	37.0	34.0	-	Swivel	Eye Nut	24 kg
5,000 lb	1 lb	20.5 in	2.50	3.50	1.81	1.69	-	5 ton	CR #8	62 lb
2,500 kg	0.5 kg	521 mm	64.0	89.0	46.0	42.9	-	Swivel	Eye Nut	28 kg
10,000 lb	2 lb	20.5 in	2.50	3.50	1.81	1.69	-	5 ton	CR #8	62 lb
5,000 kg	1 kg	521 mm	64.0	89.0	46.0	42.9	-	Swivel	Eye Nut	28 kg
20,000 lb	5 lb	28.5 in	4.00	6.25	2.59	2.25	-	10 ton	CR #11	105 lb
10,000 kg	2 kg	724 mm	101.6	159	65.8	57.2	-	Swivel	Eye Nut	47 kg
30,000 lb	10 lb	30.0 in	4.00	6.25	3.00	3.00	-	15 ton	CR #11	125 lb
15,000 kg	5 kg	762 mm	101.6	159	76.2	76.2	-	Swivel	Eye Nut	55 kg
50,000 lb	10 lb	41.0 in	5.00	6.00	3.66	3.63	15.0	25 ton	CR 25 ton	235 lb
25,000 kg	5 kg	1041 mm	127	152	93.0	92.0	381	Swivel***	Shackle #2130	106 kg
70,000 lb	20 lb	43.2 in	5.00	6.00	4.56	3.75	15.0	35 ton	CR 40 ton	270 lb
35,000 kg	10 kg	1097 mm	127	152	116	95.0	381	Swivel****	Shackle #2140	121 kg
100,000 lb	20 lb	52.1 in	5.75	6.65	5.06	4.25	16.25	CR 45 ton	CR 55 ton	420 lb
50,000 kg	10 kg	1324 mm	146	169	129	108	413	St Swivel*****	Shackle #2140	189 kg

DIMENSIONS AND LOAD TRAIN SPECIFICATIONS, MSI-9300HT

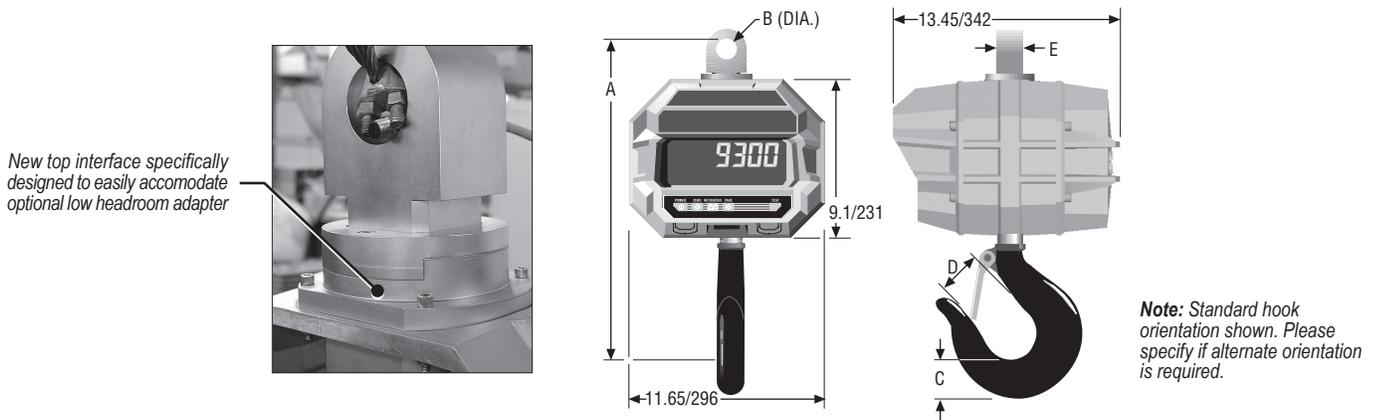

CAPACITY	RESOLUTION*	MAXIMUM TORQUE	A	B	C	D	E	FIXED HOOK	SHIPPING WEIGHT	OPTIONAL TOP SHACKLE
5,000 lb	1 lb	150 ft/lb	19.7 in	1.28 in	1.81 in	1.69 in	1.75 in	7 ton alloy	62 lb	9-1/2 ton
2,500 kg	0.5 kg	203 Nm	500.0 mm	33.0 mm	46.0 mm	42.9 mm	44.5 mm		28 kg	
10,000 lb	2 lb	150 ft/lb	19.7 in	1.28 in	1.81 in	1.69 in	1.75 in	7 ton alloy	62 lb	9-1/2 ton
5,000 kg	1 kg	203 Nm	500.0 mm	33.0 mm	46.0 mm	42.9 mm	44.5 mm		28 kg	
30,000 lb	10 lb	560 ft/lb	21.2 in	1.69 in	3.00 in	3.19 in	2.25 in	22 ton alloy	135 lb	17 ton
15,000 kg	5 kg	759 Nm	538.0 mm	43.0 mm	76.2 mm	81.0 mm	57.2 mm		61 kg	
70,000 lb	20 lb	1500 ft/lb	28.2 in	2.06 in	4.56 in	3.75 in	2.75 in	37 ton alloy	290 lb	40 ton
35,000 kg	10 kg	2033 Nm	716.0 mm	52.0 mm	116.0 mm	95.0 mm	69.9 mm		132 kg	

CONSULT FACTORY FOR HIGHER CAPACITIES

MSI-9300 Porta-Weigh+ Crane Scale

OPTIONS AND ACCESSORIES

- Substitute Shackle for bottom swivel hook
- Oversized top lifting eye or shackle
- Direct wired input power, AC or DC, (specify required voltage)
- Audible Alarm or Very Loud Siren
- Heat Shield for Foundry Operations
- Stand-alone Option – Remove CellScale RF Modem
- Slave Load Cell Input – RF MSI-9300 or 6260CS units can function as slave Crane Scale inputs to a MSI-9300 or other CellScale based products. Up to three RF connected slaves are possible.
- Fast SLA Battery Charger (Included) – Cordsets available for Europe, UK, Australia, and USA/Japan.
- 24V Battery Charger for Vehicle Applications
- Serial Input Cable 4m (Included) – MSI P/N 501705-0001. Not usable for data output. Used for addressing the embedded CellScale for Setup and/or Calibration.
- Spare 12V SLA Battery – MSI P/N D00599-0004

THE MSI LIMITED WARRANTY

MEASUREMENT SYSTEMS INTERNATIONAL, INC., WARRANTS load sensing elements and meters against defects in workmanship and materials for a period of one year from date of purchase and warrants electrical cables and batteries against the same defects for a period of ninety (90) days from date of purchase.

Any device which proves defective during the warranty period will be replaced or repaired at no charge; provided that the defective device is returned to the Company freight pre-paid.

In no event shall the Company be liable for the cost of any repairs or alterations made by others except those repairs or alterations made with its specific written consent, nor shall the Company be liable for any damages or delays whether caused by defective workmanship, materials or otherwise.

The Company shall not be liable for any personal injury or property damage resulting from the handling, possession or use of the equipment by the customer.

The warranty set forth herein is exclusive and is expressly in lieu of all other warranties, express or implied, including without limitation any implied warranties of merchantability or fitness, or of any other obligations or liability on the part of the Company.

The liability of the Company under this warranty is limited solely to repairing or replacing its products during the warranty periods; and the final judgment and disposition of all claims will be made by MEASUREMENT SYSTEMS INTERNATIONAL, INC.



**Measurement Systems
International™**

A RICE LAKE WEIGHING SYSTEMS COMPANY

14240 Interurban Avenue South Suite 200 • Seattle, WA 98168-4661 • USA

Phone: 206-433-0199 • Fax: 206-244-8470

www.msiscales.com

© 2012 Rice Lake Weighing Systems