Operation of Version II (ALL RAM)

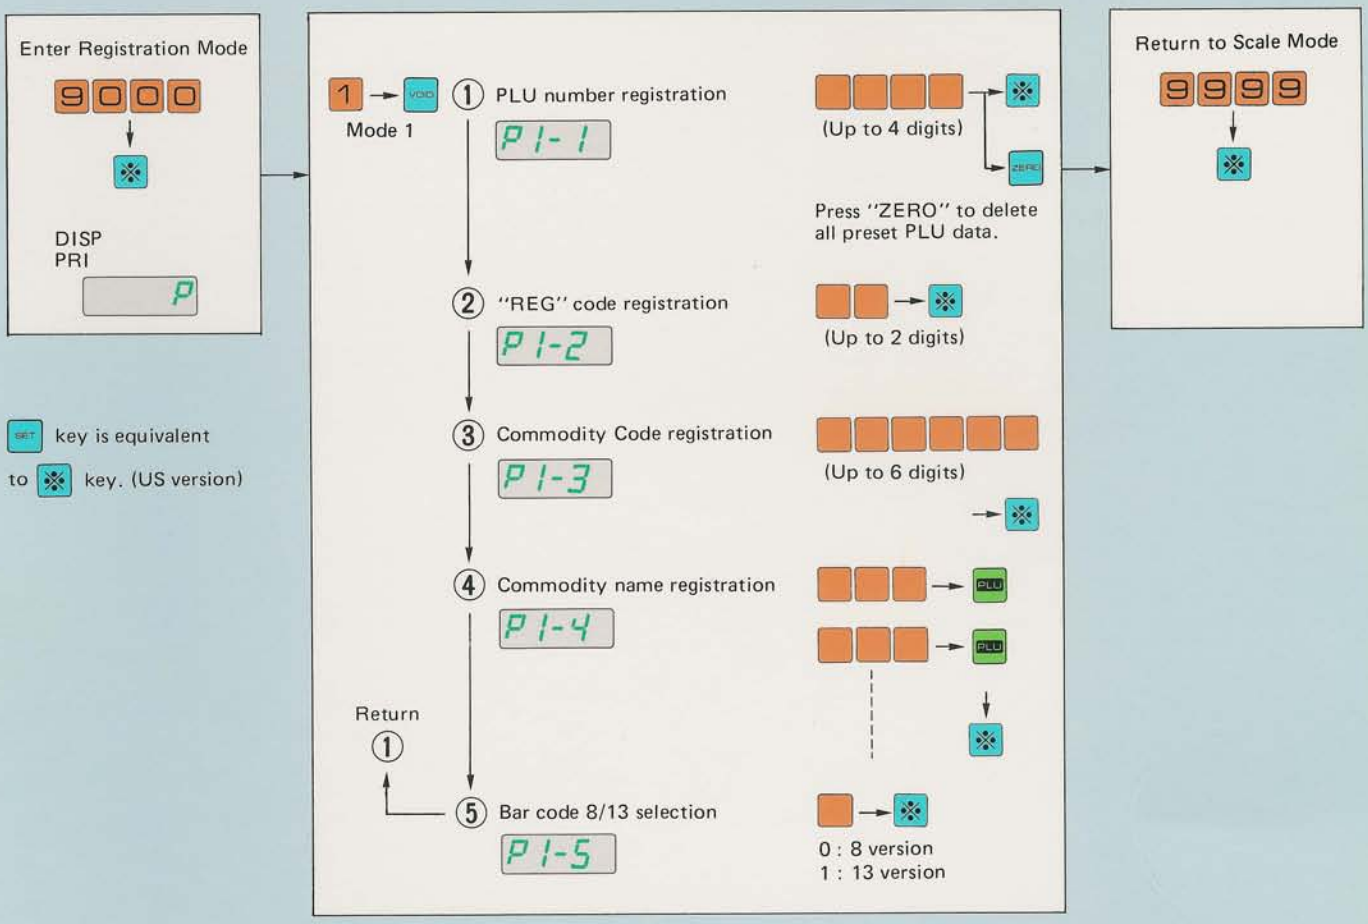

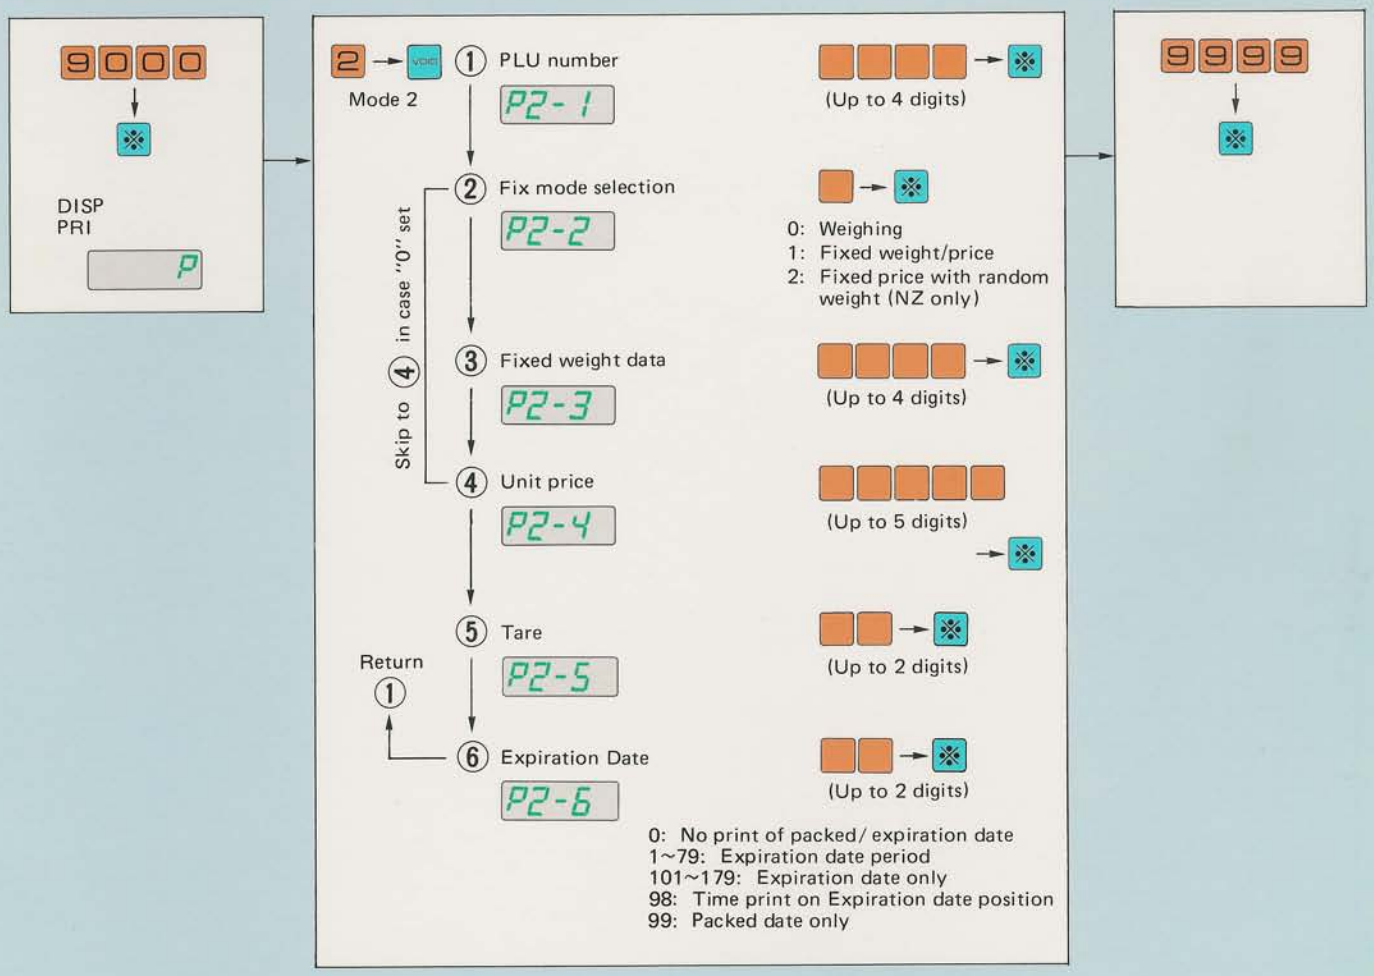

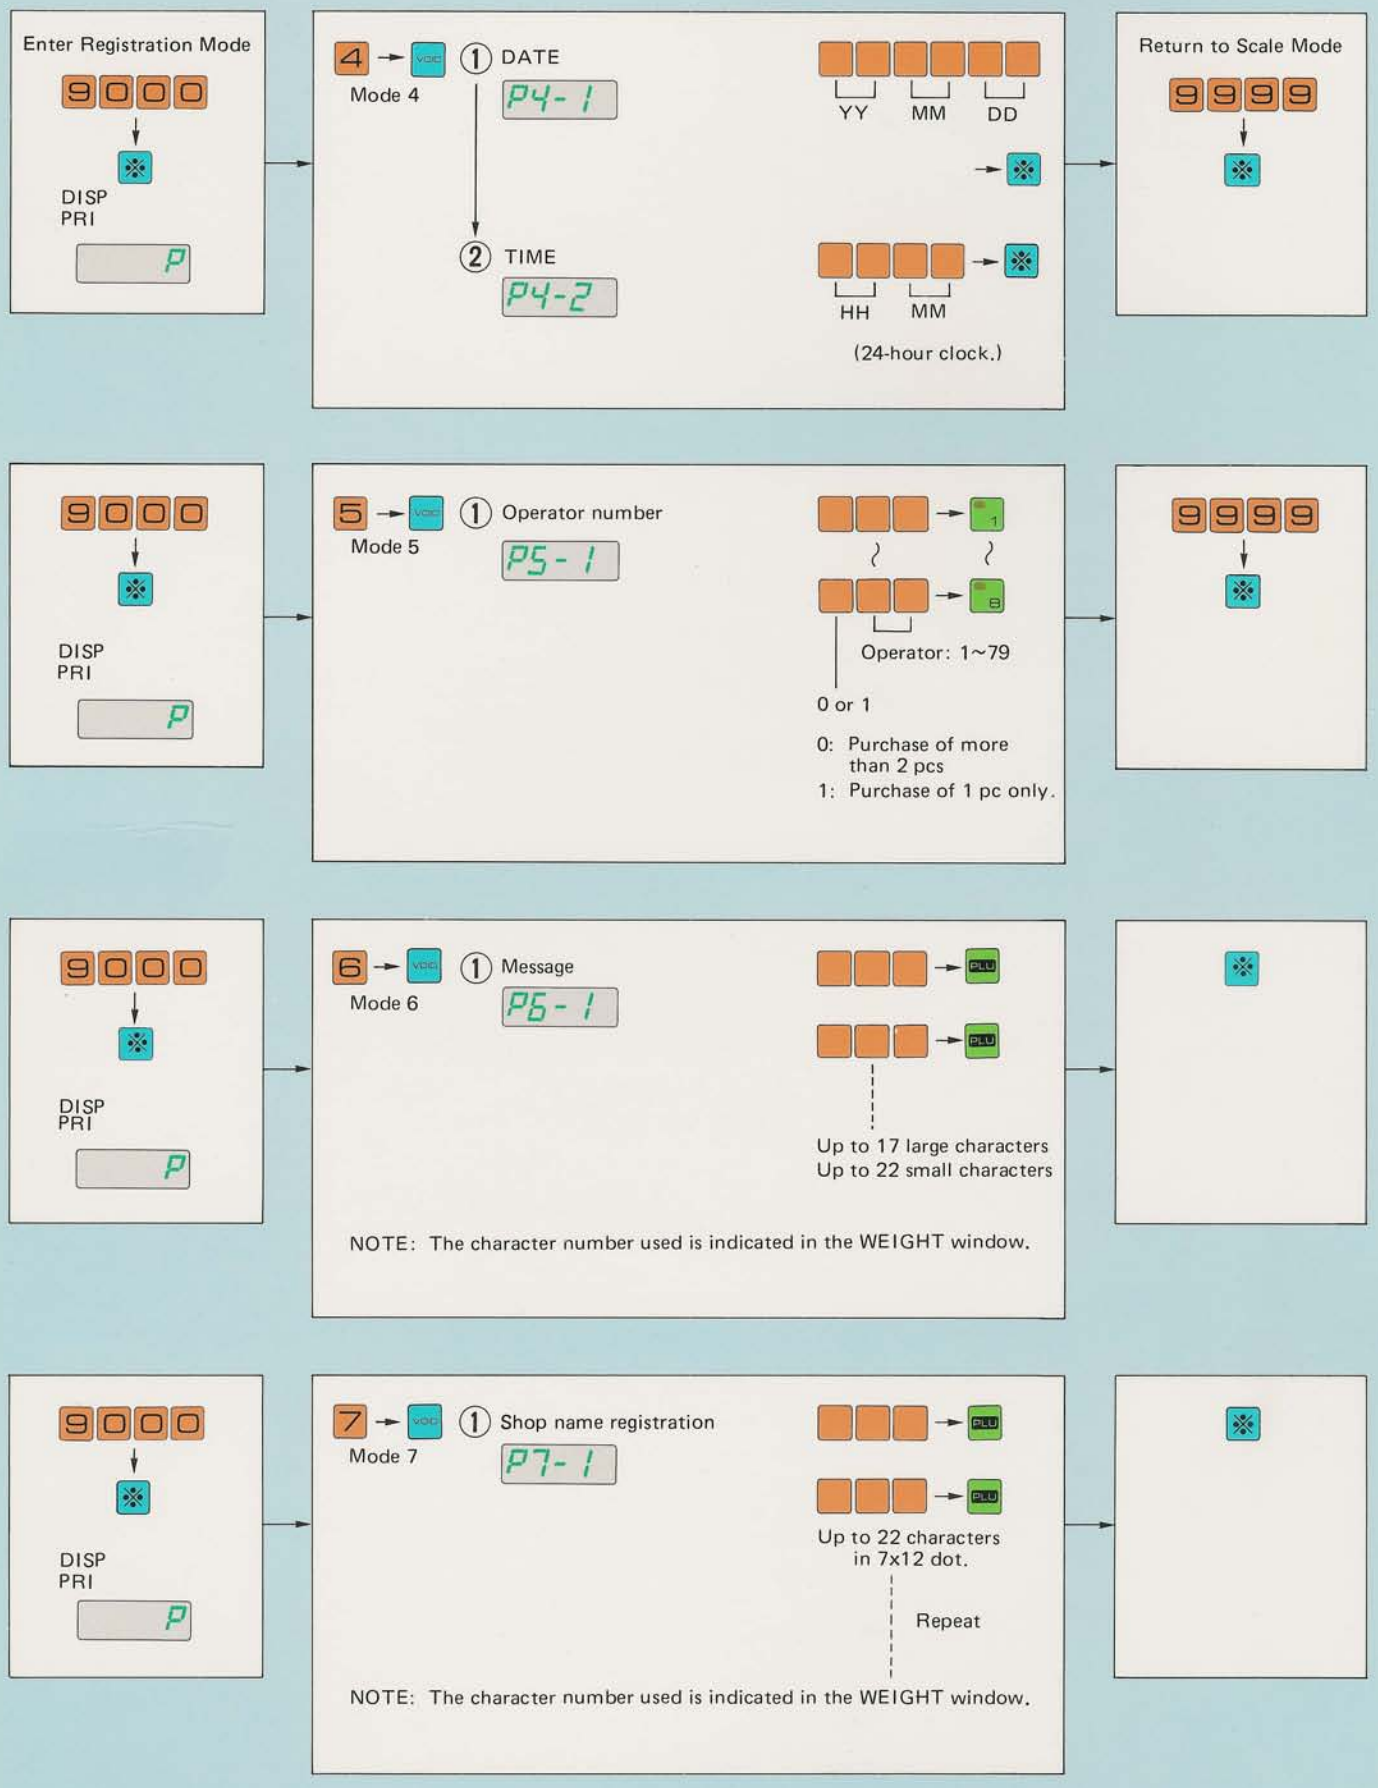
Enter Registration Mode
9000
DISP
PRI
P
4 → VOID ① DATE
Mode 4
P4-1
② TIME
P4-2
YY MM DD
HH MM
(24-hour clock.)
Return to Scale Mode
9999
5 → VOID ① Operator number
Mode 5
P5-1
1
8
Operator: 1~79
0 or 1
0: Purchase of more than 2 pcs
1: Purchase of 1 pc only.
6 → VOID ① Message
Mode 6
P6-1
PLU
Up to 17 large characters
Up to 22 small characters
NOTE: The character number used is indicated in the WEIGHT window.
7 → VOID ① Shop name registration
Mode 7
P7-1
Up to 22 characters in 7x12 dot.
Repeat
NOTE: The character number used is indicated in the WEIGHT window.

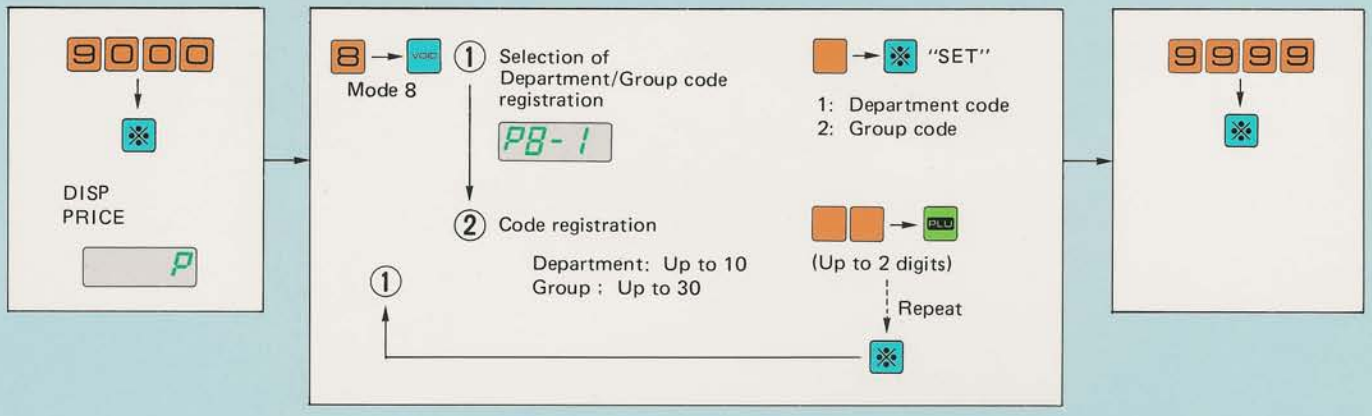
9000
DISP
PRICE
8
Mode 8
① Selection of Department/Group code registration
PB-1
② Code registration
Department: Up to 10
Group : Up to 30
①
"SET"
1: Department code
2: Group code
(Up to 2 digits)
Repeat
9999

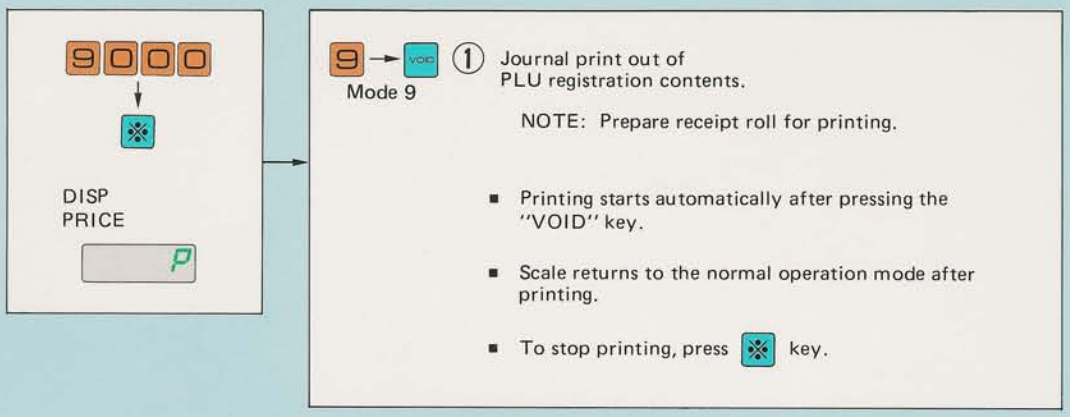
9000
DISP
PRICE
9
Mode 9
① Journal print out of PLU registration contents.
NOTE: Prepare receipt roll for printing.
■ Printing starts automatically after pressing the "VOID" key.
■ Scale returns to the normal operation mode after printing.
■ To stop printing, press key.

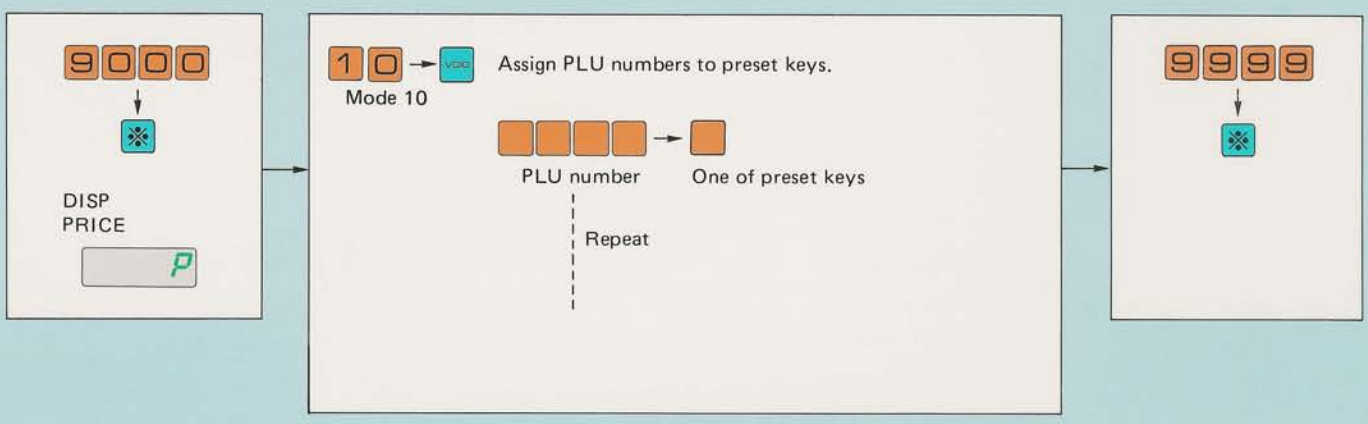
9000
DISP
PRICE
10
Mode 10
Assign PLU numbers to preset keys.
PLU number
One of preset keys
Repeat
9999

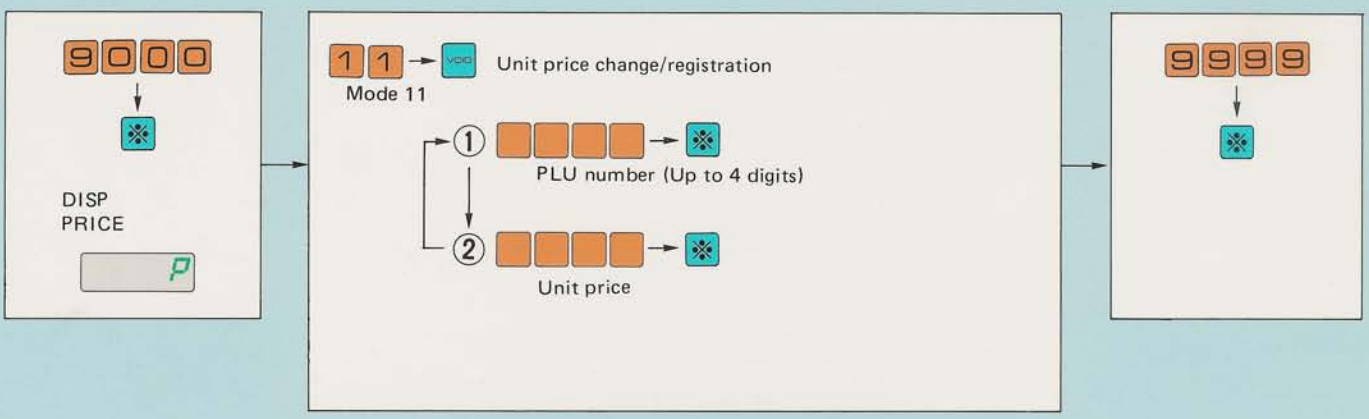
9000
DISP
PRICE
11
Mode 11
Unit price change/registration
①
PLU number (Up to 4 digits)
②
Unit price
9999

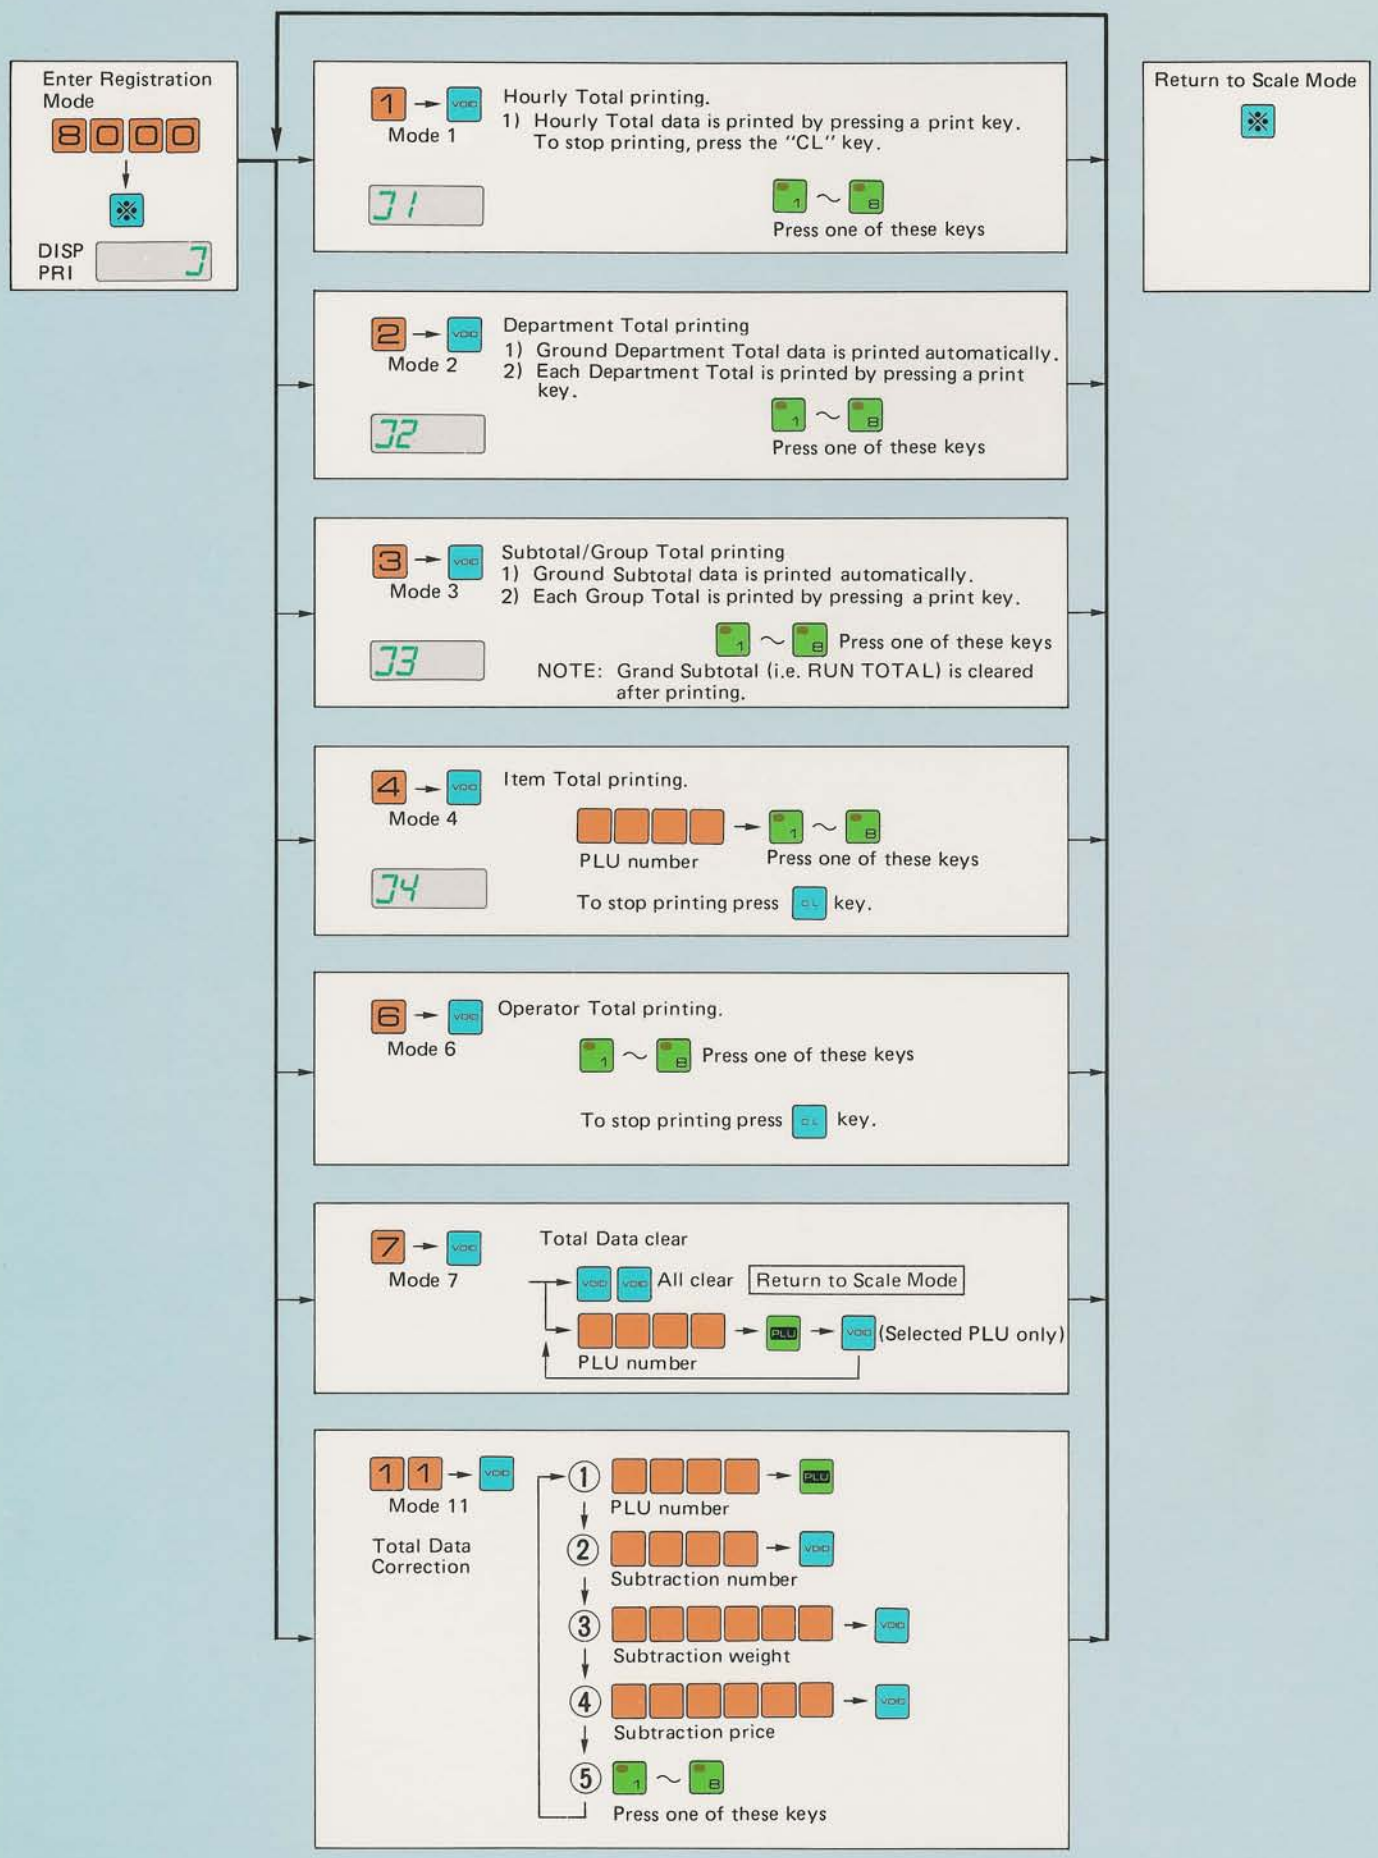
Enter Registration Mode
8000
DISP PRI
7
Return to Scale Mode
1 → VOID
Mode 1
Hourly Total printing.
1) Hourly Total data is printed by pressing a print key. To stop printing, press the "CL" key.
J1
1 ~ 8
Press one of these keys
2 → VOID
Mode 2
Department Total printing
1) Ground Department Total data is printed automatically.
2) Each Department Total is printed by pressing a print key.
J2
1 ~ 8
Press one of these keys
3 → VOID
Mode 3
Subtotal/Group Total printing
1) Ground Subtotal data is printed automatically.
2) Each Group Total is printed by pressing a print key.
J3
1 ~ 8
Press one of these keys
NOTE: Grand Subtotal (i.e. RUN TOTAL) is cleared after printing.
4 → VOID
Mode 4
Item Total printing.
J4
PLU number
1 ~ 8
Press one of these keys
To stop printing press CL key.
6 → VOID
Mode 6
Operator Total printing.
1 ~ 8
Press one of these keys
To stop printing press CL key.
7 → VOID
Mode 7
Total Data clear
VOID VOID All clear
Return to Scale Mode
PLU number
PLU
VOID
(Selected PLU only)
11 → VOID
Mode 11
Total Data Correction
① PLU number
② Subtraction number
③ Subtraction weight
④ Subtraction price
⑤ 1 ~ 8
Press one of these keys