


Selection to Startup in Kg or Oz

(Serial number B01060 and higher)




Technical Bulletins can be viewed or downloaded from the Rice Lake Weighing Systems retail distributor site at www.ricelake.com/retail

- Press and hold  while turning on the scale.
Do not release  until the scale version displays.

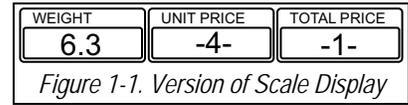

- Press and hold  until *SETUP* displays.

- Press  to enter *USUAL* Mode.

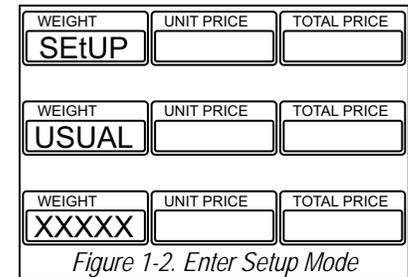


- Press , the A/D value displays.

- Press and hold  for two seconds (without beep sound).

- Press .

- Press and hold  for two seconds.


- Press the **CLEAR+ /ZERO-** key to select the digit in *TOTAL PRICE* display. Change display to **0.08**.

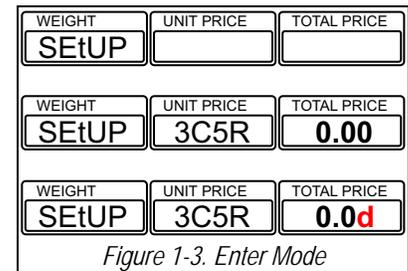

- Press .

- Press  to shift the flashing digit to the **?** position in *WEIGHT* display.
Press **CLEAR+ /ZERO-** key to modify to a **1**, **2** or **8** as needed.

2bXXX = lb
8bXXX = kg
1bXXX = oz

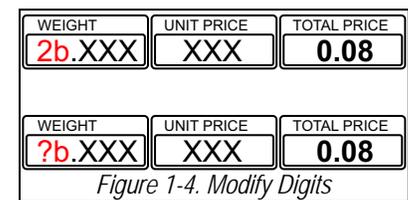

- Press  twice to end setting mode.



Note To avoid unforeseen consequences make sure to change the digits based on the setting instruction.



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319