

# Relay Option Card Installation

The Relay Option Card provides four normally open relays for an 880 indicator when installed. The Relay Option Card attaches to the 880 CPU board. Depending on the desired output of the Relay Option Card, SLOT 1 must be configured in the Setpoints Menu (SETPTS) and BIT 1-4 in the Digital I/O Menu (DIGIO) within the Setup Menu of the 880 indicator. Refer to the 880 Technical Manual (158387) for additional information on the configuration of relays.

The indicator automatically recognizes all installed option cards when the unit is powered on. No hardware-specific configuration is required to identify an installed option card to the system.



Manuals and additional resources are available from the Rice Lake Weighing Systems website at [www.ricelake.com](http://www.ricelake.com)

Warranty information can be found on the website at [www.ricelake.com/warranties](http://www.ricelake.com/warranties)



**WARNING:** Always disconnect power before opening an enclosure or controller assembly. Option card is not hot swappable. Procedures requiring work inside the indicator must be performed by qualified service personnel only.



**CAUTION:** A grounding wrist strap must be worn to protect components from electrostatic discharge (ESD) when working inside an enclosure or controller assembly.

## Parts Breakdown

The Relay Option Card kit (179157) contains the necessary items used for installation of the option card.

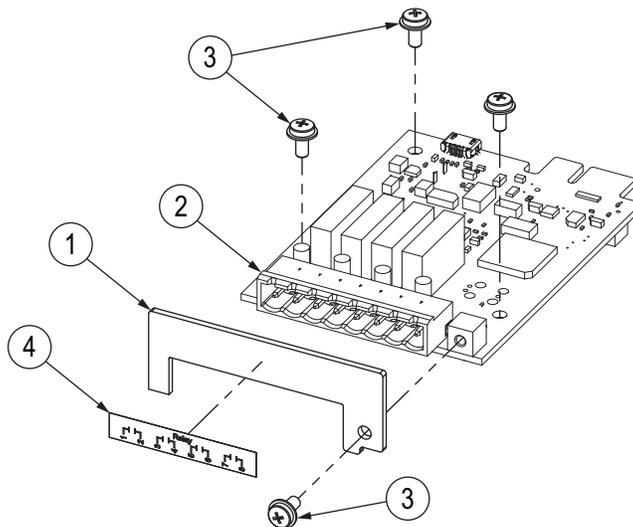


Figure 1. Relay Option Card Parts Breakdown

Item No.	Part No.	Description	Qty.	Item No.	Part No.	Description	Qty.
1	179687	Faceplate, Relay Option	1	-	53075	Clamp, Ground Cable Shield, 0.078"	1
2	164974	Board Assembly, Relay	1	-	67550	Clamp, Ground Cable Shield, 0.125"	1
3	14822	Screw, Machine 4-40 NC x 1/4	4	-	15139	Washer, No. 10 Lock	1
4	157176	Label, Relay Option 880	1	-	14621	Nut, Keps 6-32 Hex	1
-	152381	Connector, 8 Position Screw Terminal	1	-	200273	Addendum, Analog Output Card	1

Table 1. Relay Option Card Parts List

## Panel Mount Installation

1. Disconnect power to the indicator.
2. Unhook the controller assembly from the front panel DIN rail by inserting a flat blade screwdriver into the bottom tab and sliding the mounting plate down (Figure 2). Due to the angle of the hook portion of the DIN bracket, it may be a little tight as it is disconnected.

**!** **IMPORTANT:** Carefully separate the controller assembly from the front panel. The display cable harness still connects the front panel to the controller assembly.

3. Disconnect the display cable harness from the controller assembly.

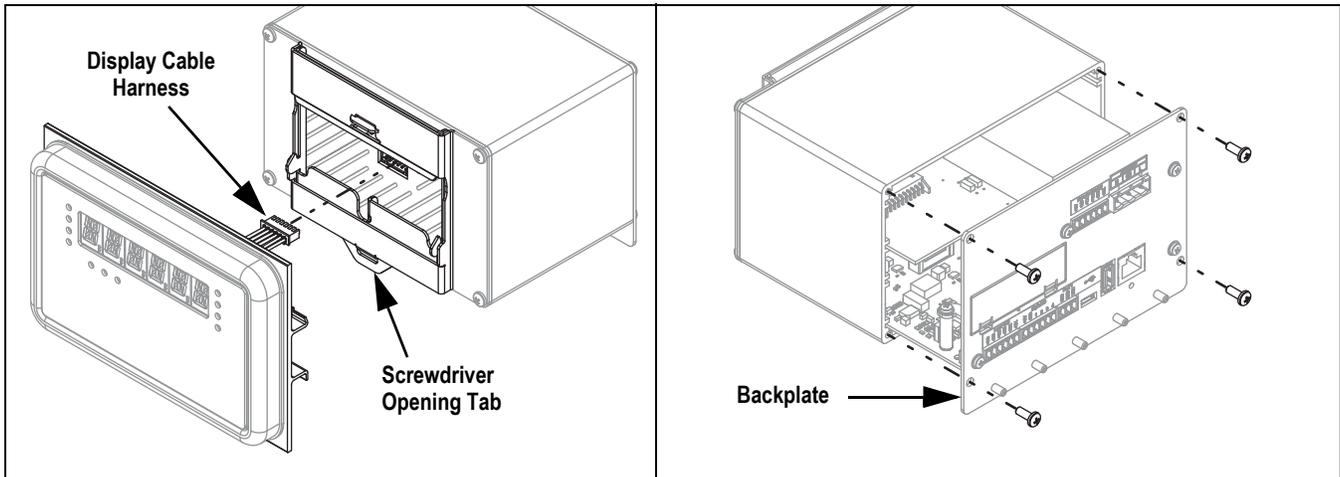


Figure 2. Front Panel and Backplate Removal

4. Remove the four screws securing the controller assembly backplate to the enclosure and carefully pull the backplate straight out from the enclosure.

**!** **IMPORTANT:** Removing the backplate from the enclosure voids the Legal for Trade status if enclosure is sealed.

5. Remove the two screws securing the power supply board to the backplate and carefully lay the power supply down.

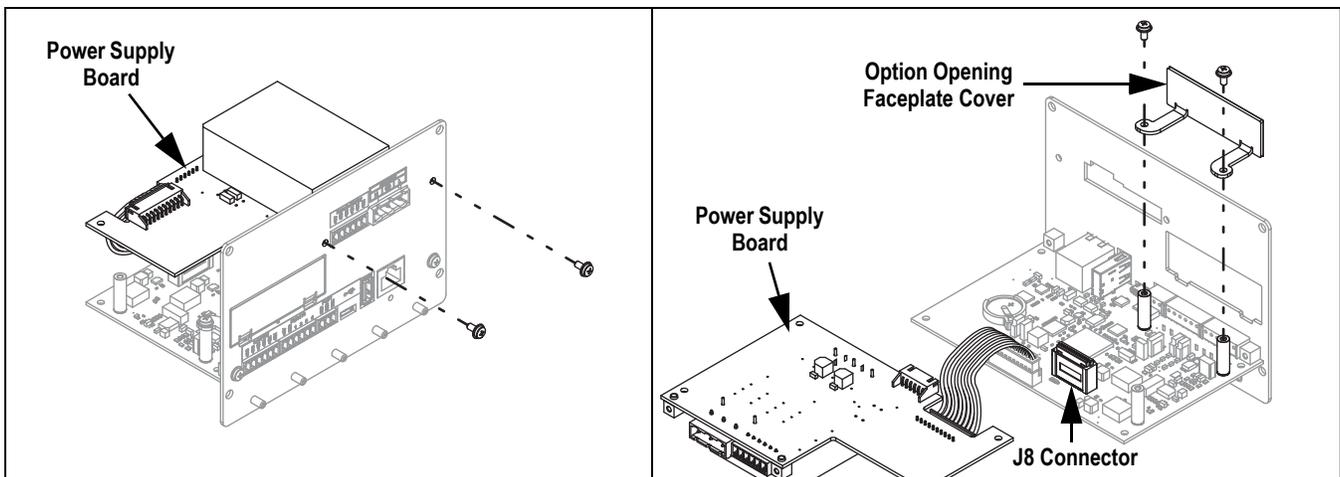


Figure 3. Power Supply Board and Faceplate Cover Removal

6. Remove the two screws securing the option opening faceplate cover to the CPU board standoffs.
7. Carefully align the J5 connector on the bottom of the option card board with the J8 connector on the 880 CPU board.

8. Press down on the option card board until it is seated on the 880 CPU board connector.

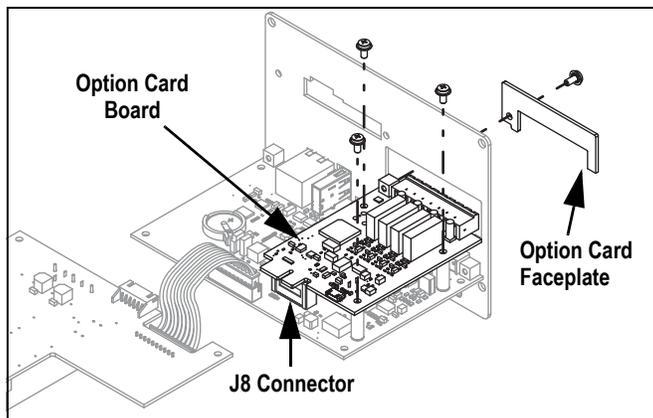


Figure 4. Option Card Board and Faceplate Installation

9. Use three provided option kit screws to secure the option card board to the threaded standoffs on the 880 CPU board.
10. Use the remaining screw provided in the option card kit to secure the option card faceplate to the threaded mounting block on the option card board within the option opening of the 880 panel mount backplate.
11. Reconnect the power supply board to the backplate with the two previously removed screws.
12. Slide backplate with boards into the controller assembly enclosure, ensuring that each board is seated correctly in the grooves of the enclosure.



**NOTE:** Before securing the backplate, verify the display connector aligns properly with the front cutout. If not aligned, remove the backplate with boards and re-insert so the display connector aligns with the front cutout.

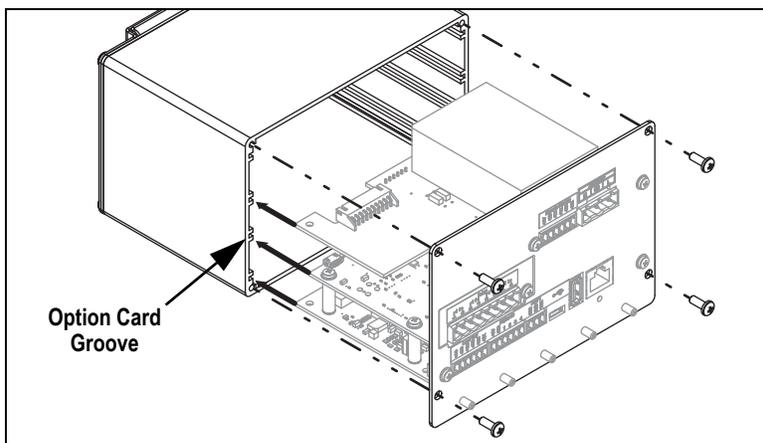


Figure 5. Backplate with Boards Reassembly

13. Secure backplate to controller assembly enclosure with the four previously removed corner screws.
14. Reconnect the display cable harness and then reconnect the controller assembly to the front panel DIN rail.
15. Connect necessary cable(s). See [Connection Pin Assignments](#) on page 5 for additional information.
16. Shield ground the cable(s) using a cable clamp, washer and nut provided in the option card kit and a grounding stud on the controller assembly backplate.



**NOTE:** See the 880 technical manual (158387) for additional information on shield grounding.

17. Reconnect power to the indicator.
18. If needed, see the 880 technical manual (158387) for additional information on Relay configuration.



**NOTE:** SLOT 1 must be configured in the Setpoints Menu (SETPTS) and BIT 1-4 in the Digital I/O Menu (DIGIO) within the Setup Menu of the 880 indicator for the desired output.

## Universal Mount Installation

1. Disconnect power to the indicator.
2. Remove the backplate of the enclosure as instructed in the 880 technical manual (158387) to access the CPU board.
3. Carefully align the J5 connector on the bottom of the option card board with the J8 connector on the 880 CPU board.

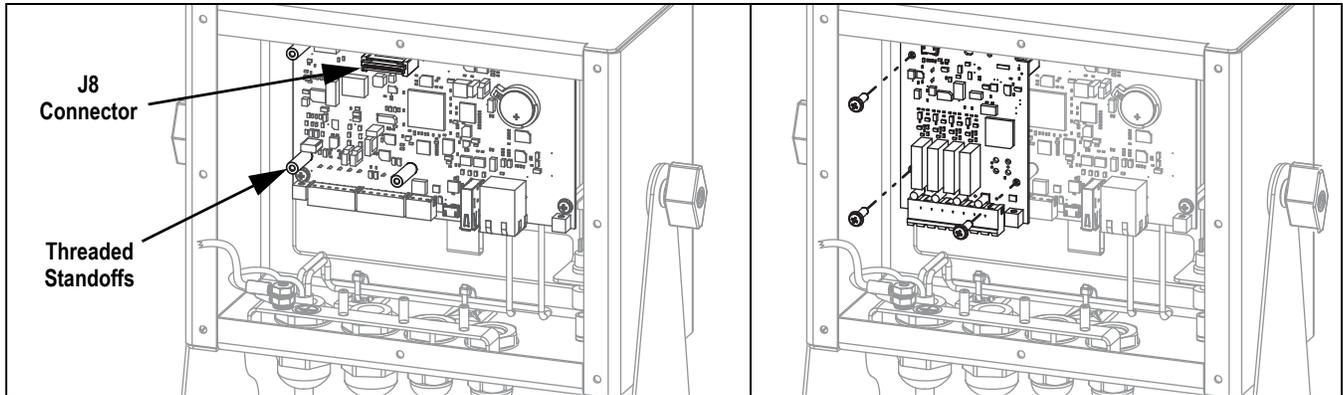


Figure 6. Option Card Board Installation

4. Press down on the option card board until it is seated on the 880 CPU board connector.
5. Use three provided option kit screws to secure the option card board to the threaded standoffs on the 880 CPU board.



**NOTE:** The provided faceplate is not needed when installing the option card inside of the 880 universal enclosure.

6. Route and connect necessary cable(s). See [Connection Pin Assignments](#) on page 5 for additional information.
7. Shield ground the cable(s) using a cable clamp, washer and nut provided in the option card kit and a grounding stud on the enclosure.



**NOTE:** See the 880 technical manual (158387) for additional information on shield grounding.

8. Secure the backplate and then reconnect power to the indicator.
9. If needed, see the 880 technical manual (158387) for additional information on Relay configuration.



**NOTE:** SLOT 1 must be configured in the Setpoints Menu (SETPTS) and BIT 1-4 in the Digital I/O Menu (DIGIO) within the Setup Menu of the 880 indicator for the desired output.

## Connection Pin Assignments



**NOTE:** The indicator automatically recognizes installed option cards when the unit is powered on. No hardware-specific configuration is required to identify the newly-installed card to the system.

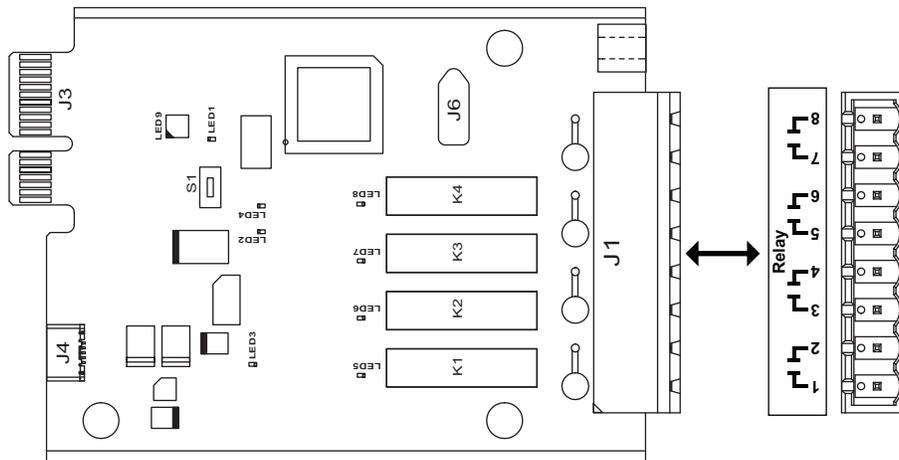


Figure 7. Relay Option Card Board

J1 Pin	Signal	
1	K1	Common
2	K1	Normally Open
3	K2	Common
4	K2	Normally Open
5	K3	Common
6	K3	Normally Open
7	K4	Common
8	K4	Normally Open

Table 2. Pin Assignments

## Specifications

4 SPST:	Normally Open Dry Contact Relays 250 VAC @ 3A 30 VDC @ 3A
Relay Protection:	The use of external fusing to limit current is recommended. Relay COM-NO are transient protected to 400V @ 600W
Relay Contacts:	Displayed as Slot 1, Bit 1-4 in the setpoint configuration menu



© Rice Lake Weighing Systems    Specifications subject to change without notice.

230 W. Coleman St. ▪ Rice Lake, WI 54868 ▪ USA  
U.S. 800-472-6703 ▪ Canada/Mexico 800-321-6703 ▪ International 715-234-9171 ▪ Europe +31 (0)26 472 1319